WD806U4SA**

Washing Machine

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

WD806U4SA-03223C-03_EN.indd 1 2015/5/26 16:29:23

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
25 Child lock
25 Sound off
25 Delay end
26 Drain Only Function
26 My cycle
27 Eco Bubble
28 AIR Wash
29 Using dry course
30 Washing clothes using the cycle selector
31 Washing clothes manually
31 Laundry guidelines
32 Detergent and additives information
32 Which detergent to use
33 Detergent drawer
33 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE 34

34 Eco Drum Clean
35 Draining the washing machine in an emergency
36 Cleaning the debris filter
36 Cleaning the exterior
37 Cleaning the detergent drawer and drawer recess
37 Cleaning the water hose mesh filter
38 Repairing a frozen washing machine
38 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 39

39 Check these points if your washing machine...
40 Information codes

CYCLE CHART 41

41 Cycle chart

APPENDIX 42

42 Fabric care chart
42 Protecting the environment
43 Specifications

WD806U4SA-03223C-03_EN.indd 2 2015/5/26 16:29:24

safety information

The appliance is designed for home use only.

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WD806U4SA-03223C-03_EN.indd 3 2015/5/26 16:29:24

safety information

WARNING: To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your product. The product door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

WD806U4SA-03223C-03_EN.indd 4 2015/5/26 16:29:24

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

The lint trap has to be cleaned frequently, if applicable.

Lint must not to be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

Do not dry unwashed items in the tumble dryer.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WD806U4SA-03223C-03_EN.indd 5 2015/5/26 16:29:24

safety information

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.

WD806U4SA-03223C-03_EN.indd 6 2015/5/26 16:29:24

⚠ WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WD806U4SA-03223C-03_EN.indd 7 2015/5/26 16:29:24

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, turn off the water & power supply immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WD806U4SA-03223C-03_EN.indd 8 2015/5/26 16:29:25

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WD806U4SA-03223C-03_EN.indd 9 2015/5/26 16:29:25

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.
- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.
- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.
Open the Water Tap slowly after a long period of non-use.
- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.
- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.
- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.
- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).
- If the door is not closed completely, it may result in water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:
- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse.
In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

WD806U4SA-03223C-03_EN.indd 10 2015/5/26 16:29:25

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

WD806U4SA-03223C-03_EN.indd 11 2015/5/26 16:29:25

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use the strong acid cleaning agent.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WD806U4SA-03223C-03_EN.indd 12 2015/5/26 16:29:25

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

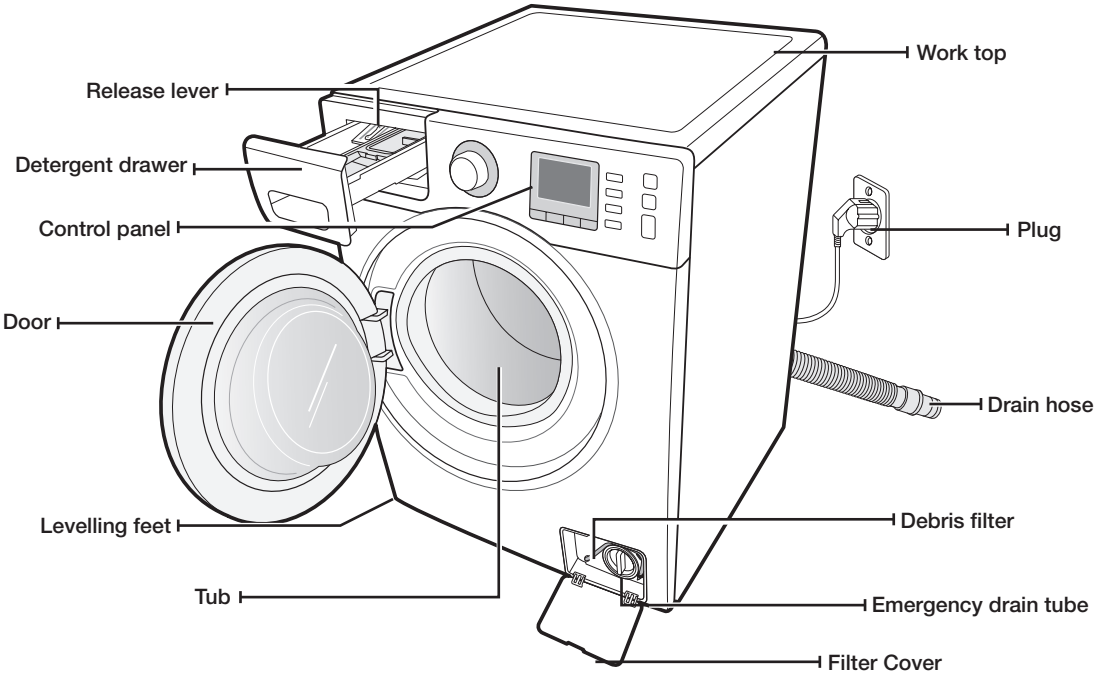

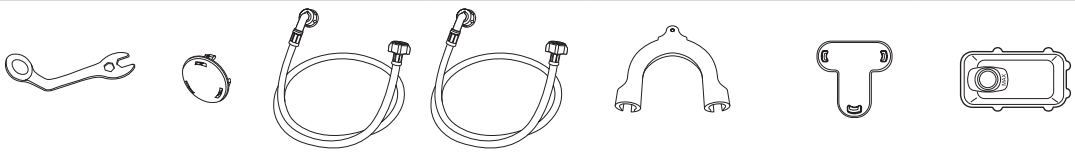

Spanner	Bolt hole covers	Cold	Hot (Selected model)	Hose guide	Cap fixer (Selected model)	Liquid detergent box(Selected model)
		Water supply hose				

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WD806U4SA-03223C-03_EN.indd 13 2015/5/26 16:29:25

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220V / 50Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD806U4SA-03223C-03_EN.indd 14 2015/5/26 16:29:25

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 50 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD806U4SA-03223C-03_EN.indd 15 2015/5/26 16:29:26

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

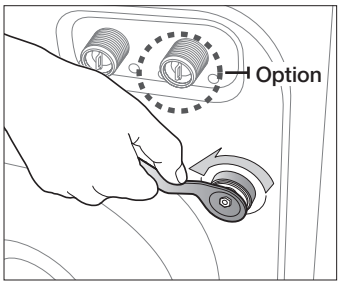

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

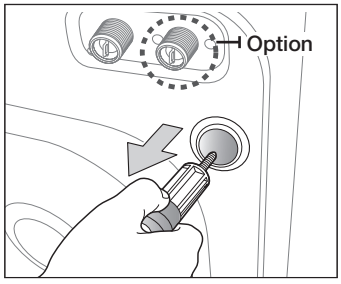

3. Fill the holes with the supplied plastic covers.

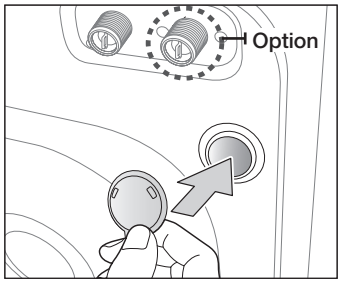

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

Insert the cap fixer, (one of the accessories in the vinyl pack), into the hole from which you removed the power cord at the back of the product.

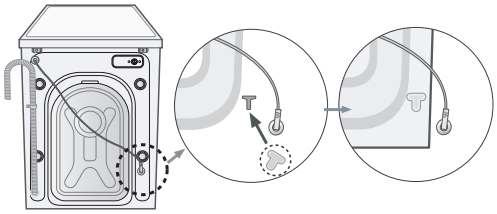

WD806U4SA-03223C-03_EN.indd 16 2015/5/26 16:29:26

STEP 3
Adjusting the Levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

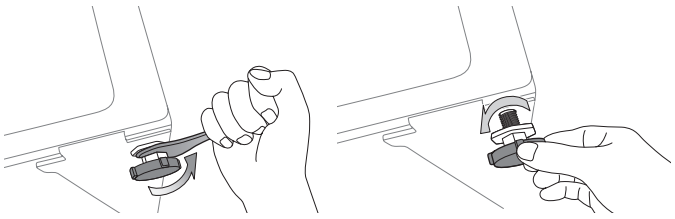

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

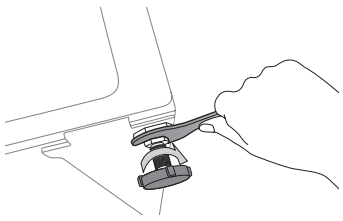

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

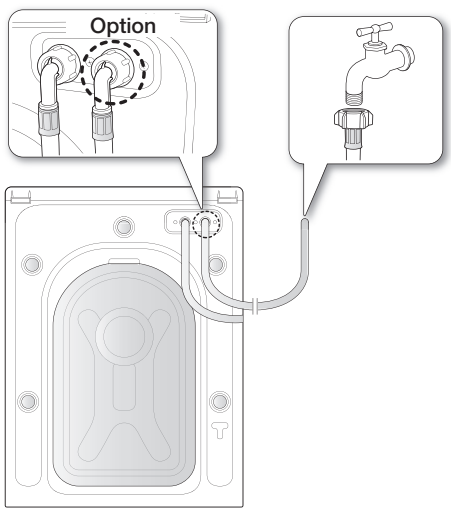

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD806U4SA-03223C-03_EN.indd 17 2015/5/26 16:29:26

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

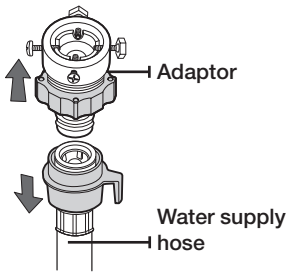

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

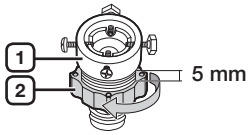

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards.
Turn part (2) following the arrow and connect (1) and (2).

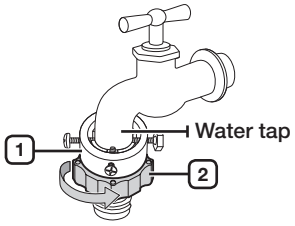

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

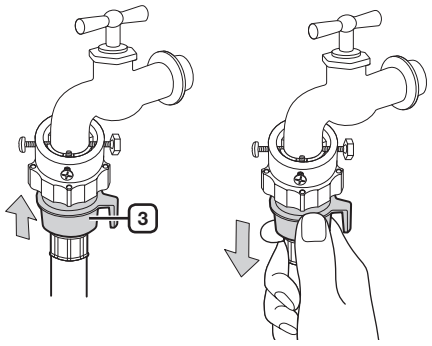

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

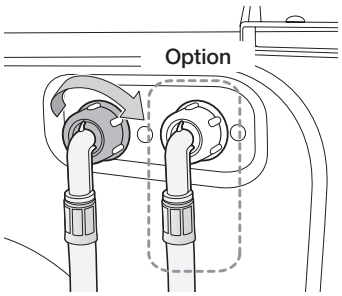

WD806U4SA-03223C-03_EN.indd 18 2015/5/26 16:29:27

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

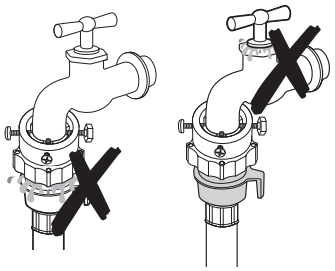

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

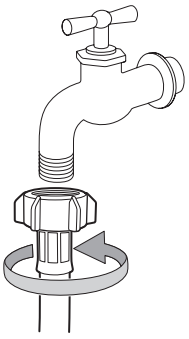

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

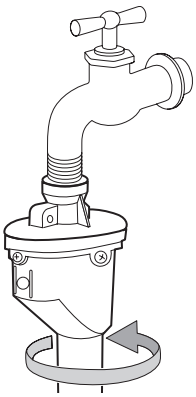

WD806U4SA-03223C-03_EN.indd 19 2015/5/26 16:29:27

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

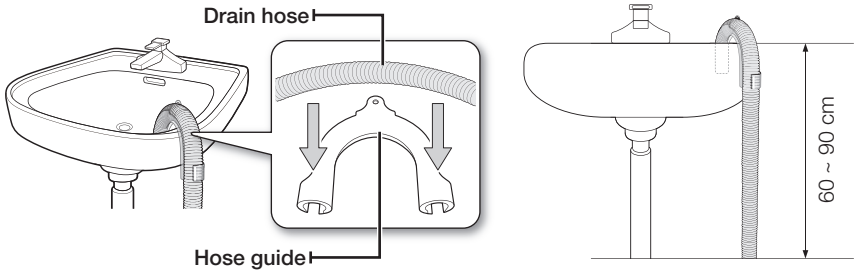

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

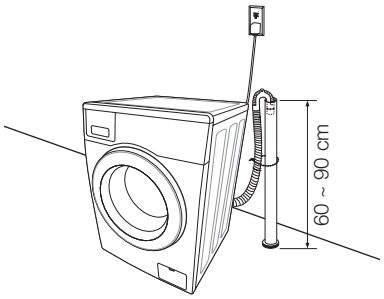

The standpipe drain requires;
- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, an AC 220V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

Test run
Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 6
Calibration mode

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Temp** button and **Delay End** button simultaneously, and press the **Power** button in addition. Then the machine turns on and enter “Calibration mode”. The “CLB” message appears.
3. Press the **Start/Pause** button to activate “Calibration Mode”.
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When “Calibration Mode” is finished, “END/0(En)” appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

WD806U4SA-03223C-03_EN.indd 20 2015/5/26 16:29:28

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

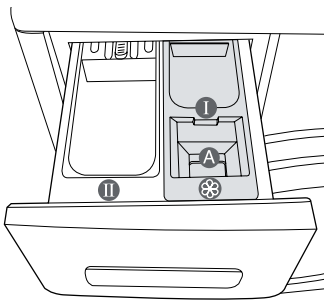

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

To use liquid detergent, use the liquid detergent box (refer to page 33 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 31-32.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD806U4SA-03223C-03_EN.indd 21 2015/5/26 16:29:28

washing a load of laundry

USING THE CONTROL PANEL

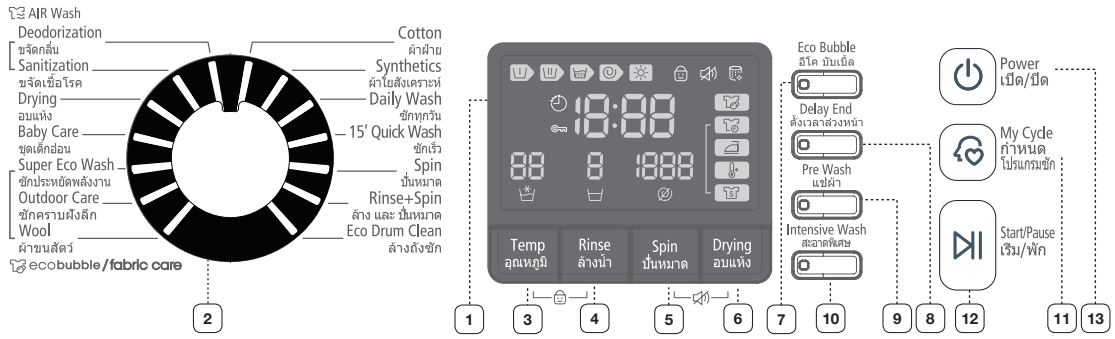

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector". (see page 30) **Cotton** - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Daily Wash** - Use for everyday items such as underwear and shirts. **15' Quick Wash** - For lightly soiled garments and less than 2kg laundry that you require quickly. • The values(15' minutes) can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent, fluctuation in the electricity supply and extra options selected. • Add only a small amount of detergent for a small amount of laundry (less than 2kg) for the 15' Quick Wash course, because if you add too much detergent, detergent may remain after the wash. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. **Eco Drum Clean** - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed. **AIR Wash** - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes. (Deodorization → Sanitization) • **Deodorization** - Reduces bad smells from the laundry • **Sanitization** - Deodorize and sanitize the laundry by stronger AIR Wash action with higher temp. **Drying** - Select to dry laundry automatically by detecting the amount and weight of the laundry.

WD806U4SA-03223C-03_EN.indd 22 2015/5/26 16:29:29

	Baby Care - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **Super Eco Wash** - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving. **Outdoor Care** - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions.During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. **Drain Only** - Turn the Cycle Selector to the Spin position, press the Spin button repeatedly until "No spin(⊘)" light comes on, and then press the Start/Pause button to drain the water.
3 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (: Cold Water , 20 ˚C, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
4 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
5 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WD806U4 | \⁀/, ⊘, 400, 800, 1200, 1400 rpm "No spin ⊘" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold \⁀/" - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
6 **DRYING BUTTON**	Pressing the button cycles through the following options. Cup Board → Low Temp → Iron → Time Dry (30min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → Cup Board **Cup Board** - Use this cycle to dry loads such as cotton, underwear, and linen. **Low Temp** - This cycle protects heat-sensitive items at a low drying temperature. **Iron** - Finishes the dry cycle in a moist state appropriate for Ironing. **Time Dry** -Dry the laundry for the specified period of time. • You must avoid washing laundry that can't safely be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry. • Drying is not available for Eco Drum Clean, AIR Wash and Wool courses.

WD806U4SA-03223C-03_EN.indd 23 2015/5/26 16:29:30

washing a load of laundry

7 **ECO BUBBLE SELECTION BUTTON**	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
8 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
9 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Daily Wash, Baby Care, Super Eco Wash.
10 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time will be increased if the intensive wash is on.
11 **MY CYCLE SELECTION BUTTON**	Choose your favorite cycle including temperature, spin, soil level, option, etc.
12 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
13 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD806U4SA-03223C-03_EN.indd 24 2015/5/26 16:29:30

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

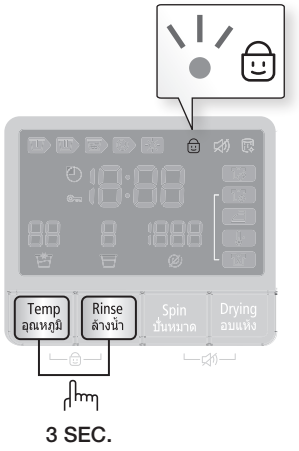

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Drying** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

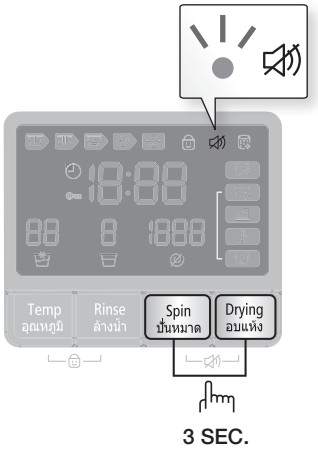

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

WD806U4SA-03223C-03_EN.indd 25 2015/5/26 16:29:37

Drain Only Function

When you want just drain water from washing machine, follow directions below.

1. Press the **Power** button.
2. Turn the Cycle Selector to the Spin position.
3. Press the **Spin** button repeatedly until “No spin(⌀)” light comes on.
4. Press the **Start/Pause** button.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

See the “Cycle Chart” on page 41 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

You can change the My Cycle settings by repeating the same process above.
The last used setting will be displayed the next time you choose the My Cycle function.

If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

WD806U4SA-03223C-03_EN.indd 26 2015/5/26 16:29:38

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Daily Wash , 15' Quick Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool		Not available

- A different bubble function may be applied depending the course.

Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
   - Add the appropriate amount of detergent into the detergent compartment Ⅱ, and add the fabric softener to softener compartment ❀ just under the fiber softener base line (MAX) of "A")
   - When the Prewash course is selected, add detergent into the prewash compartment Ⅰ as well.
   - To use liquid detergent, leave the liquid detergent box in the drawer(refer to "Liquid Detergent" section on page 33).

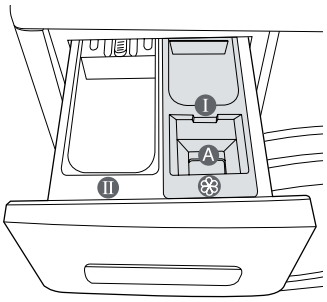

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
   - Press the **Start/Pause** button to start the wash.
   - The amount of the laundry is automatically detected and the laundry is washed.
   - Once a washing machine operation begins, you cannot add or select the bubble function.

- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

WD806U4SA-03223C-03_EN.indd 27 2015/5/26 16:29:38

AIR Wash

AIR Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton jumpers, sweaters and suits. [Two items or less (less than 1 kg)]

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **AIR Wash** by turning the **Cycle Selector**.

MODE	CYCLE TIME
Deodorization	29 min
Sanitization	59 min

- When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 3:00 – 19:00.

4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **AIR Wash** cannot be worked. Drain the water and select **AIR Wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with AIR Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid AIR Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD806U4SA-03223C-03_EN.indd 28 2015/5/26 16:29:38

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothes of 6.0kg (5.0kg)(Selected model).

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is not available for Eco Drum Clean, AIR Wash and Wool courses.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order:
     Cup Board → Low Temp → Iron → Time Dry (30 min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → Cup Board

Drying Type		Information	Time (Max Load)
Auto Drying	Cupboard( )	Standard: Dries the laundry.	180min.
	Low Temp( )	Dries the laundry at a low temperature to protect the texture of the laundry.	200min.
	Iron( )	For leaving items partially damp so that it can be easily ironed	140min.
Time Drying( )		You can select the appropriate drying time depending on the texture, quantity, and moisture.	270min.

- For Auto Drying programs, this machine automatically displays Drying Time by sensing the weight of clothes before drying, and adjusting appropriately.
- **For laundry weighing less than 3.0kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.**
- If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
- When using the drying cycle, check if the water supply valve is opened.

4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.
5. Press **Start/Pause** button.
   : It automatically performs an optimal function from washing to drying.
   - The selected course can't be altered after the start of drying.
   - If cold water is not supplied, drying will not be performed.
   - In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD806U4SA-03223C-03_EN.indd 29 2015/5/26 16:29:39

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Daily Wash, Baby care, Super Eco Wash cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Daily Wash, 15' Quick Wash, Baby Care, Super Eco Wash, Outdoor Care, Wool. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WD806U4SA-03223C-03_EN.indd 30 2015/5/26 16:29:39

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp** button to select the temperature.
   (: Cold Water, 20 ˚C, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   (: No Spin, : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

WD806U4SA-03223C-03_EN.indd 31 2015/5/26 16:29:39

washing a load of laundry

Determining the load capacity
Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD806
Cotton **- average/lightly soiled** **- heavily soiled**	8.0 kg
Synthetics	3.0 kg
Outdoor Care	2.0 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvet cover, the wash time may be lengthened or the spin efficiency may be degraded.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

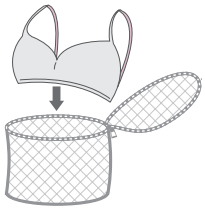

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

WD806U4SA-03223C-03_EN.indd 32 2015/5/26 16:29:39

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.

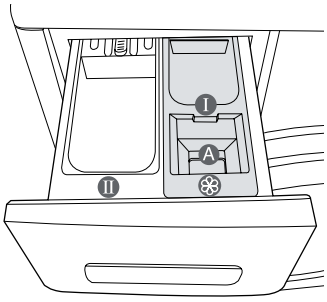

To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ֍ if required. DO NOT exceed the MAX FILL (Ⓐ) line.

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (֍).

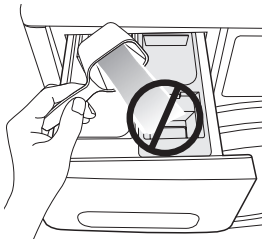

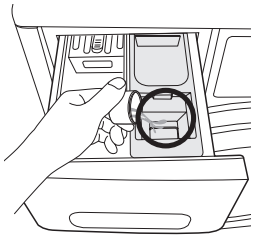

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⓘ.

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

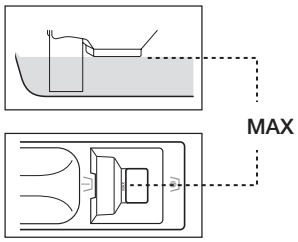

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

- DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

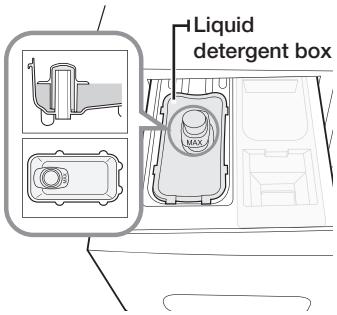

WD806U4SA-03223C-03_EN.indd 33 2015/5/26 16:29:39

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.

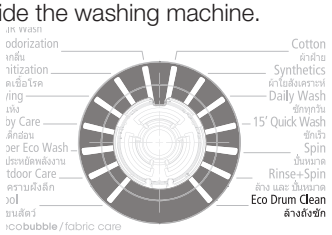

1. Press the **Power** button.
2. Turn the **Cycle Selector** to the ECO Drum Clean course.
   - You can only use the Delay End function.
   - The water temperature during the ECO Drum Clean is set to 70 ˚C.
   - It will auto set cotton 30˚C middle water level program when cloth is put in.

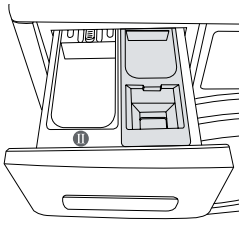

3. Place the appropriate amount of cleansing agent into the detergent compartment Ⅱ and close the detergent drawer (when cleaning the drum using a cleansing agent).
   - Be sure to use the recommended cleansing agent for cleaning the drum.
   - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

4. Press the **Start/Pause** button.
   - If you press the **Start/Pause** button, the ECO Drum Clean course begins.

- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.

CAUTION

- **In the ECO Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

WD806U4SA-03223C-03_EN.indd 34 2015/5/26 16:29:45

The ECO Drum Clean Auto Alarm Function

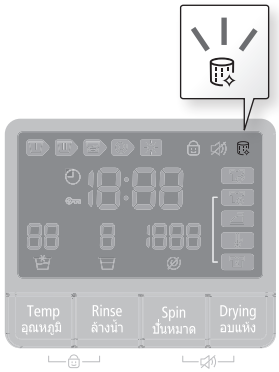

- If the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 36). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

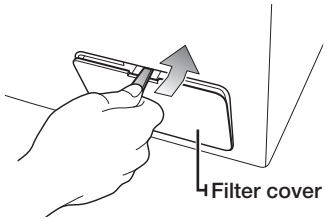

3. Pull forward the emergency drain tube to separate it from the guide hook.

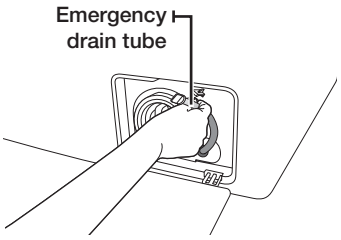

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.

Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

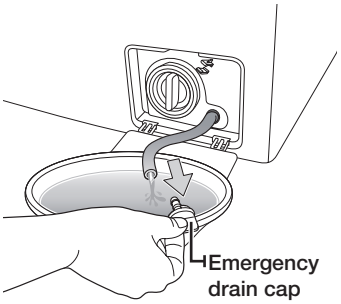

WD806U4SA-03223C-03_EN.indd 35 2015/5/26 16:29:47

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous section.)
If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 35.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

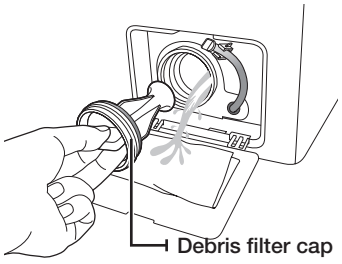

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

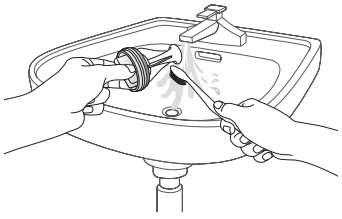

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD806U4SA-03223C-03_EN.indd 36 2015/5/26 16:29:48

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

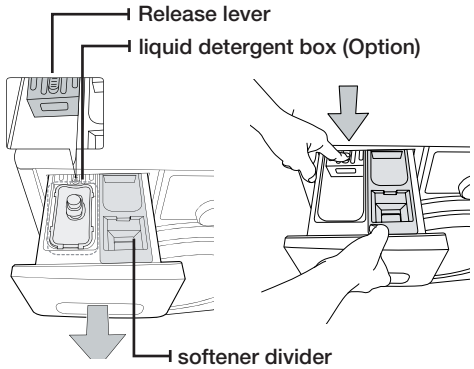

3. Wash all parts under running water.

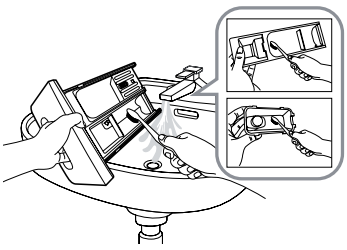

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

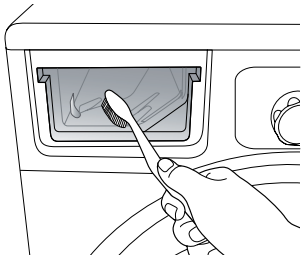

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

WD806U4SA-03223C-03_EN.indd 37 2015/5/26 16:29:48

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton** cycle and add bleach to the bleach compartment. Then, push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD806U4SA-03223C-03_EN.indd 38 2015/5/26 16:29:48

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WD806U4SA-03223C-03_EN.indd 39 2015/5/26 16:29:48

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose. When the washer displays the “4E” code, the washer do draining for 3 minutes. During this time, the Power button is inoperative.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
HOT	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until “Hot” indication disappeared.
Sud/Sd	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD806U4SA-03223C-03_EN.indd 40 2015/5/26 16:29:48

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (˚C)	Spin Speed(MAX) rpm
	WD806	Pre-wash	wash	Softener		WD806U4
Cotton	8.0	●	yes	●	95	1400
Synthetics	3.0	●	yes	●	60	1200
Daily Wash	4.0	●	yes	●	60	1400
15' Quick Wash	2.0	-	yes	●	40	800
Eco Drum Clean	-	-	-	-	70	400
Baby Care	4.0	●	yes	●	95	1400
Super Eco Wash	4.0	●	yes	●	40	1200
Outdoor Care	2.0	-	yes	-	40	1200
Wool	2.0	-	yes	-	40	800

PROGRAM	Eco Bubble	Intensive	Delay end	Drying
Cotton	●	●	●	●
Synthetics	●	●	●	●
Daily Wash	●	●	●	●
15' Quick Wash	●	-	●	●
Eco Drum Clean	-	-	●	-
Baby Care	●	●	●	●
Super Eco Wash	●	●	●	●
Outdoor Care	●	-	●	●
Wool	●	-	●	-

1. A cycle with a prewash takes approx. 18 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456. Cotton 60˚C + Intensive are programs according to EN60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WD806U4SA-03223C-03_EN.indd 41 2015/5/26 16:29:48

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

WD806U4SA-03223C-03_EN.indd 42 2015/5/26 16:29:50

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WD806U4SA**	
			W600mm X D640mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			100 ℓ	
NET WEIGHT			WD806U4SA**	
			70 kg	
WASH AND SPIN CAPACITY			8.0 kg [DRY LAUNDRY]	
DRY CAPACITY			5.0 kg	
POWER CONSUMPTION	MODEL		WD806U4SA**	
	WASHING		220 V	100 W
	WASH AND HEATING		220 V	2000 W
	DRYING		220 V	1600 W
	SPIN	MODEL	WD806U4SA**	
		220 V	400 W	
	PUMPING		34 W	
SPIN REVOLUTIONS	MODEL		WD806U4SA**	
	rpm		1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD806U4SA-03223C-03_EN.indd 43 2015/5/26 16:29:50

SAMSUNG

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

Code No. DC68-03223C-03_EN

WD806U4SA**

เครื่องซักผ้า

คู่มือผู้ใช้

Planet First 100% Recycled Paper

คู่มือนี้ใช้กระดาษรีไซเคิล 100%

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung

SAMSUNG

WD806U4SA-03223C-03_TH.indd 1 2015/5/27 9:25:40

สารบัญ

การติดตั้งเครื่องซักผ้า 13

13 การตรวจสอบชิ้นส่วนอุปกรณ์
14 การปฏิบัติตามข้อกำหนดในการติดตั้ง
14 คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์
14 การจ่ายน้ำ
15 การระบายน้ำ
15 พื้น
15 อุณหภูมิโดยรอบ
15 การติดตั้งในซุ้มหรือตู้
15 การติดตั้งเครื่องซักผ้า

การซักผ้า 21

21 การซักครั้งแรก
21 คำแนะนำเบื้องต้น
22 การใช้แผงควบคุม
25 ล็อคป้องกันเด็ก
25 ปิดเสียง
25 ตั้งเวลาล่วงหน้า
26 ระบายน้ำเท่านั้น
26 กำหนดโปรแกรม
27 ซักฟองแบบประหยัด
28 AIR Wash
29 การใช้โปรแกรมอบแห้ง
30 การซักโดยใช้ปุ่มเลือกโปรแกรมซัก
31 การซักด้วยตนเอง
31 คำแนะนำของผ้า
32 ข้อมูลผงซักฟอกและสารเพิ่มเติมต่างๆ
32 ควรใช้ผงซักฟอกแบบใด
33 ช่องใส่ผงซักฟอก
33 สารซักฟอกชนิดน้ำ (เฉพาะบางรุ่น)

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า 34

34 ล้างถังซัก
35 การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน
36 การทำความสะอาดตัวกรองเศษด้าย
36 การทำความสะอาดภายนอก
37 การทำความสะอาดช่องใส่และที่พักผงซักฟอก
37 การทำความสะอาดตัวกรองท่อจ่ายน้ำ
38 การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว
38 การจัดเก็บเครื่องซักผ้า

การแก้ไขปัญหาและรหัสข้อมูล 39

39 ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...
40 รหัสข้อมูล

ผังโปรแกรม 41

41 ผังโปรแกรม

ภาคผนวก 42

42 ผังการดูแลผ้า
42 การปกป้องสิ่งแวดล้อม
43 ข้อมูลจำเพาะ

WD806U4SA-03223C-03_TH.indd 2 2015/5/27 9:25:40

ข้อมูลเกี่ยวกับความปลอดภัย

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น

ขอแสดงความยินดีกับเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ คู่มือนี้มีข้อมูลที่สำคัญเกี่ยวกับการติดตั้ง การใช้งานและการบำรุงรักษาเครื่องซักผ้า Samsung เครื่องใหม่ของคุณ โปรดสละเวลาเพื่ออ่านคู่มือนี้ เพื่อใช้ประโยชน์สูงสุดจากคุณสมบัติและคุณประโยชน์มากมายของเครื่องซักผ้า

สิ่งที่คุณต้องทราบเกี่ยวกับคำแนะนำเพื่อความปลอดภัย

โปรดอ่านคู่มือนี้โดยละเอียดเพื่อให้มั่นใจว่าคุณทราบวิธีใช้คุณลักษณะและฟังก์ชันต่าง ๆ ของอุปกรณ์ชิ้นใหม่นี้ได้อย่างปลอดภัยและมีประสิทธิภาพ และโปรดเก็บไว้ในที่ปลอดภัยใกล้กับอุปกรณ์ เพื่อให้สามารถอ้างอิงได้ในภายหลัง ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น

คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานเครื่องซักผ้า

เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเครื่องซักผ้าของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอาจอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ www.samsung.com

สัญลักษณ์และคำเตือนเพื่อความปลอดภัยที่สำคัญ

ความหมายของสัญลักษณ์และเครื่องหมายในคู่มือผู้ใช้นี้:

⚠ **คำเตือน**	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บรุนแรง การเสียชีวิต หรือทรัพย์สินเสียหาย**
⚠ **ข้อควรระวัง**	อันตรายหรือการกระทำที่ไม่ปลอดภัยที่อาจทำให้เกิด **การบาดเจ็บหรือทำให้สิ่งของเสียหาย**
⚠ **ข้อควรระวัง**	ในการลดความเสี่ยงจากไฟ การระเบิด ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้:

	ห้ามทำ
	ห้ามถอดประกอบ
	ห้ามสัมผัส
	ทำตามคำแนะนำอย่างเคร่งครัด
	ถอดปลั๊กของเครื่องซักผ้าจากเต้าเสียบที่ผนัง
	ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าดูด
	ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ
	หมายเหตุ

สัญลักษณ์คำเตือนเหล่านี้มีให้เพื่อป้องกันการบาดเจ็บของตัวคุณเองและบุคคลอื่น
โปรดปฏิบัติตามอย่างเคร่งครัด
หลังจากอ่านส่วนนี้แล้ว โปรดเก็บไว้เพื่อนำมาอ้างอิงในภายหลัง

อ่านคำแนะนำทั้งหมดก่อนที่จะใช้อุปกรณ์

เช่นเดียวกับอุปกรณ์ทุกชนิดที่ใช้ไฟฟ้าและมีชิ้นส่วนที่เคลื่อนไหว อุปกรณ์นี้อาจมีอันตรายได้ ในการใช้อุปกรณ์นี้อย่างปลอดภัย โปรดทำความเข้าใจกับการทำงานและใช้ความระมัดระวังขณะใช้งาน

WD806U4SA-03223C-03_TH.indd 3 2015/5/27 9:25:41

ข้อมูลเกี่ยวกับความปลอดภัย

⚠ คำเตือน

คำเตือน: เพื่อลดความเสี่ยงในการเกิดอัคคีภัย ไฟฟ้าดูด หรือการบาดเจ็บขณะใช้เครื่องซักผ้า โปรดปฏิบัติตามข้อควรระวังทั่วไป และข้อควรระวังต่อไปนี้:

อย่าให้เด็ก (หรือสัตว์เลี้ยง) เล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า ประตูเครื่องซักผ้านั้นไม่สามารถเปิดได้โดยง่ายจากภายใน และเด็กอาจได้รับบาดเจ็บร้ายแรงถ้าติดอยู่ภายใน

อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล

โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้

สำหรับใช้ในยุโรป: อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีผู้ดูแล

เพื่อป้องกันหรือหลีกเลี่ยงอันตราย ถ้าสายไฟชำรุดหรือเสียหาย จะต้องได้รับการเปลี่ยนโดยผู้ผลิต หรือตัวแทนที่มีคุณสมบัติใกล้เคียง

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

สำหรับเครื่องที่มีการเปิดระบายอากาศที่ฐาน พรมปูพื้นจะต้องไม่ปิดตัวเปิด

จะต้องใช้ชุดท่อที่ต่อกับเครื่องชุดใหม่ และจะต้องไม่นำชุดท่อเก่ากลับมาใช้ใหม่

WD806U4SA-03223C-03_TH.indd 4 2015/5/27 9:25:41

ข้อควรระวัง: ในกรณีที่ต้องการหลีกเลี่ยงอันตรายที่เกิดขึ้นโดยไม่ตั้งใจของการตั้งค่าตัวตัดอุณหภูมิใหม่ อุปกรณ์นี้จะต้องไม่ถูกจ่ายพลังงานผ่านอุปกรณ์สวิทช์ภายนอก เช่น ตัวตั้งเวลาหรือถูกเชื่อมต่อไปยังแผงวงจรไฟฟ้าที่ถูกเปิดและปิด

ห้ามใช้เครื่องปั่นผ้าแห้งถ้ามีการใช้สารเคมีอุตสาหกรรมเพื่อการทำความสะอาด

ต้องทำความสะอาดที่ดักเศษผ้าบ่อยๆ ถ้าเป็นไปได้

อย่าให้มีเศษผ้าสะสมรอบๆ ถังปั่นผ้าแห้ง (ไม่เกี่ยวข้องกับผลิตภัณฑ์ที่มีการระบายอากาศไปยังนอกอาคาร)

ต้องมีการระบายอากาศอย่างเพียงพอเพื่อป้องกันการไหลย้อนกลับของก๊าซเข้าสู่ห้อง จากอุปกรณ์ที่ใช้เชื้อเพลิงอื่นๆ รวมถึงเปลวเพลิงที่ลุกไหม้อยู่

ห้ามอบผ้าที่ยังไม่ได้ซักในเครื่องอบผ้าแบบหมุน

ผ้าที่เปื้อนสารต่างๆ เช่น น้ำมันปรุงอาหาร อะซีโทน แอลกอฮอล์ น้ำมันเบนซิน น้ำมันก๊าด น้ำยาขจัด รอยเปื้อนยางสน แวกซ์ และน้ำยาขจัดแวกซ์ ควรซักในน้ำร้อนโดยเพิ่มน้ำยาซักผ้าเพิ่มเติมก่อนที่จะอบแห้งในเครื่องอบผ้า

สิ่งของเช่น ยางโฟม (โฟมลาเท็กซ์) หมวกอาบน้ำ ผ้ากันน้ำ สิ่งที่มีการเคลือบยางด้านหลัง และผ้าหรือหมอนที่มีแผ่นโฟมยาง ไม่ควรอบแห้งในเครื่องอบผ้า

ควรใช้น้ำยาปรับผ้านุ่มและผลิตภัณฑ์ลักษณะเดียวกันตามที่ผู้ผลิตน้ำยาแนะนำเท่านั้น

ส่วนสุดท้ายของเครื่องปั่นผ้าแห้งจะทำงานโดยไม่มีความร้อน (รอบการลดความร้อน) เพื่อให้มั่นใจว่าผ้าอยู่ในอุณหภูมิที่ไม่ทำให้เกิดความเสียหาย

นำสิ่งของออกจากกระเป๋าให้หมด เช่น ไฟแช็คและไม้ขีดไฟ

WD806U4SA-03223C-03_TH.indd 5 2015/5/27 9:25:41

ข้อมูลเกี่ยวกับความปลอดภัย

คำเตือน: ห้ามหยุดถังอบก่อนที่จะสิ้นสุดรอบการอบแห้ง ยกเว้นกรณีที่นำผ้าออกและแผ่กระจาย อย่างรวดเร็ว เพื่อกระจายความร้อน

อากาศที่ไหลออกจะต้องไม่ระบายออกสู่ช่องที่ใช้สำหรับระบายไอจากอุปกรณ์อื่นที่ใช้แก๊ซหรือเชื้อเพลิงอื่นๆ

ต้องไม่ติดตั้งอุปกรณ์ในพื้นที่ซึ่งสามารถล็อคประตูได้ ใช้ประตูเลื่อนหรือประตูที่มีบานพับเปิดออกด้านตรงข้ามกับประตูของเครื่องอบผ้า ในลักษณะที่จะทำให้ไม่สามารถเปิดประตูเครื่องอบผ้าได้ไม่สุด

สำหรับใช้ในยุโรป: อย่าให้เด็กอายุต่ำกว่า 3 ปีเข้าใกล้ ยกเว้นกรณีที่มีผู้ดูแลตลอดเวลา

WD806U4SA-03223C-03_TH.indd 6 2015/5/27 9:25:41

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการติดตั้ง

การติดตั้งอุปกรณ์นี้ต้องกระทำโดยช่างเทคนิคที่ได้รับการรับรอง หรือบริษัทผู้ให้บริการ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

อุปกรณ์นี้มีน้ำหนักมาก โปรดใช้ความระมัดระวังเมื่อยก

ต่อสายไฟเข้ากับเต้ารับไฟฟ้า AC 220V/50Hz ขึ้นไป และใช้เต้ารับสำหรับอุปกรณ์นี้เพียงอย่างเดียว นอกจากนี้ โปรดอย่าใช้สายไฟสำหรับต่อ
- การใช้เต้ารับไฟฟ้าที่ผนังร่วมกับอุปกรณ์อื่นโดยผ่านสายไฟสำหรับต่อ หรือแถบปลั๊กไฟ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับในข้อมูลจำเพาะของผลิตภัณฑ์ มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนังอย่างแน่นหนา

นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากขั้วของปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง
- ถอดปลั๊กไฟและทำความสะอาดด้วยผ้าแห้ง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ต่อปลั๊กไฟเข้ากับเต้ารับให้ถูกทิศทาง เพื่อให้สายไฟพาดไปทางพื้น
- ถ้าคุณต่อปลั๊กไฟกับเต้ารับในทางตรงกันข้าม ลวดนำไฟฟ้าภายในสายไฟอาจเสียหายและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก
- ถ้าเด็กนำถุงพลาสติกมาสวมศีรษะ อาจทำให้หายใจไม่ออก

เมื่ออุปกรณ์หรือปลั๊กไฟ หรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ

อุปกรณ์ต้องได้รับการลงกราวด์อย่างเหมาะสม
ห้ามลงกราวด์อุปกรณ์กับท่อก๊าซ ท่อน้ำพลาสติก หรือสายโทรศัพท
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ การระเบิด หรือปัญหากับผลิตภัณฑ์
- ห้ามต่อปลั๊กไฟฟ้ากับเต้ารับไฟฟ้าที่ไม่ได้ลงกราวด์อย่างถูกต้อง และโปรดตรวจสอบว่าเป็นไปตามข้อกำหนดของท้องถิ่นและของประเทศ

ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัสดุที่ติดไฟง่าย
ห้ามติดตั้งอุปกรณ์นี้ในที่ชื้น มีน้ำมัน หรือมีฝุ่นมาก ในตำแหน่งที่ได้รับแสงแดดหรือน้ำ (น้ำฝน) โดยตรง

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่มีอุณหภูมิต่ำ
- น้ำที่แข็งตัวจะทำให้ท่อต่างๆ ระเบิด

ห้ามติดตั้งอุปกรณ์นี้ในตำแหน่งที่อาจมีก๊าซรั่วไหล
- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้เครื่องแปลงไฟฟ้า
- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม
- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามใช้แรงดึงหรือหักงอสายไฟ
ห้ามบิดหรือผูกปมกับสายไฟ
อย่าแขวนสายไฟไว้กับโลหะ วางของหนักทับสายไฟ เดินสายไฟไว้ระหว่างวัตถุอื่น หรือดันสายไฟเข้าสู่ช่องว่างด้านหลังอุปกรณ
- อาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้

ห้ามดึงสายไฟ เมื่อถอดปลั๊กไฟออกจากเต้ารับ
- ถอดปลั๊กไฟด้วยการจับที่ตัวปลั๊ก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้

ห้ามวางสายไฟและท่อในที่ซึ่งคุณอาจสะดุดได้ง่าย

WD806U4SA-03223C-03_TH.indd 7 2015/5/27 9:25:41

ข้อมูลเกี่ยวกับความปลอดภัย

ข้อควรระวัง สัญญาณข้อควรระวังสำหรับการติดตั้ง

อุปกรณ์นี้ควรอยู่ในตำแหน่งที่สามารถเอื้อมถึงปลั๊กไฟได้ง่าย
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ติดตั้งและปรับระดับเครื่องซักผ้าบนพื้นที่สามารถรับน้ำหนักได้
- มิฉะนั้นอาจทำให้มีการสั่นสะเทือนผิดปกติ มีการเคลื่อนที่ เสียงรบกวน หรือมีปัญหากับผลิตภัณฑ์

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการใช้งาน

ถ้าอุปกรณ์มีน้ำท่วม ให้ตัดไฟฟ้าและการจ่ายน้ำทันที และติดต่อศูนย์บริการใกล้บ้าน
- ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต

ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม

ถ้ามีก๊าซรั่ว (เช่น ก๊าซโพรเพน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ห้ามสัมผัสกับอุปกรณ์หรือสายไฟ
- ห้ามใช้พัดลมไฟฟ้า
- อาจเกิดประกายไฟที่ทำให้ระเบิดหรือเพลิงไหม้

อย่าให้เด็กเล่นบนเครื่องซักผ้าหรือในเครื่องซักผ้า นอกจากนี้ เมื่อทิ้งอุปกรณ์ ให้ถอดก้านล็อคประตูเครื่องซักผ้าออก
- ถ้าติดอยู่ภายใน เด็กอาจไม่สามารถออกมาได้และอาจหายใจไม่ออกจนกระทั่งเสียชีวิต

โปรดนำบรรจุภัณฑ์ (ฟองน้ำ โฟม) ที่ด้านล่างของเครื่องซักผ้าออกก่อนที่จะใช้งาน

WD806U4SA-03223C-03_TH.indd 8 2015/5/27 9:25:42

ห้ามซักผ้าที่เปื้อนน้ำมันเชื้อเพลิง น้ำมันก๊าด เบนซีน ทินเนอร์ แอลกอฮอล์ หรือสารไวไฟหรือสารระเหยชนิดต่างๆ
- อาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้หรือระเบิดได้

ห้ามเปิดประตูเครื่องโดยใช้แรงขณะที่เครื่องทำงาน (การซัก/อบแห้ง/ปั่นหมาดขณะอุณหภูมิสูง)
- น้ำที่ไหลออกจากเครื่องซักผ้าอาจทำให้ร้อนลวกหรือทำให้พื้นลื่น

อาจทำให้เกิดการบาดเจ็บได้
- การใช้แรงเปิดประตูอาจทำให้ผลิตภัณฑ์เสียหายหรือทำให้เกิดการบาดเจ็บ

โปรดอย่าสอดมือเข้าใต้เครื่องซักผ้า
- อาจทำให้เกิดการบาดเจ็บได้

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก
- อาจทำให้เกิดไฟฟ้าช็อตได้

ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่
- การต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้าอีกครั้งอาจทำให้เกิดประกายไฟและทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม

อย่าปล่อยให้เด็กหรือบุคคลที่ไม่แข็งแรงใช้เครื่องซักผ้านี้โดยไม่มีผู้ดูแล อย่าให้เด็กเข้าสู่ภายในอุปกรณ์
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต น้ำร้อนลวก หรือบาดเจ็บได้

โปรดอย่าสอดมือหรือโลหะเข้าใต้เครื่องซักผ้าขณะที่เครื่องกำลังทำงาน
- อาจทำให้เกิดการบาดเจ็บได้

โปรดอย่าถอดปลั๊กอุปกรณ์ด้วยการดึงที่สายไฟ ให้จับที่ตัวปลั๊กและดึงออกจากเต้ารับไฟฟ้าตรงๆ
- ความเสียหายที่เกิดขึ้นกับสายไฟอาจทำให้เกิดการลัดวงจร เพลิงไหม้ และ/หรือไฟฟ้าช็อต

โปรดอย่าซ่อมแซม ถอดประกอบ หรือดัดแปลงเครื่องด้วยตนเอง
- ห้ามใช้ฟิวส์ (เช่น สายทองแดง ลวดโลหะ ฯลฯ) นอกเหนือจากฟิวส์มาตรฐาน
- เมื่อจำเป็นต้องซ่อมแซมหรือติดตั้งอุปกรณ์ซ้ำอีกครั้ง โปรดติดต่อศูนย์บริการใกล้บ้านคุณ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ ปัญหากับผลิตภัณฑ์ หรือการบาดเจ็บ

เมื่อท่อจ่ายน้ำหลวมหลุดออกจากก๊อกและทำให้น้ำท่วมอุปกรณ์ ให้ถอดปลั๊กไฟ
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม

ถอดปลั๊กไฟเมื่อไม่ได้ใช้อุปกรณ์เป็นเวลานาน หรือระหว่างพายุฝนฟ้าคะนอง
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม

WD806U4SA-03223C-03_TH.indd 9 2015/5/27 9:25:42

ข้อมูลเกี่ยวกับความปลอดภัย

ข้อควรระวัง สัญญาณข้อควรระวังสำหรับการใช้งาน

เมื่อเครื่องซักผ้าเปื้อนสิ่งแปลกปลอมเช่น สารซักฟอก สิ่งสกปรก เศษอาหาร ฯลฯ ให้ถอดปลั๊กไฟและทำความสะอาดเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ

- มิฉะนั้นอาจทำให้ผลิตภัณฑ์เปลี่ยนสี เปลี่ยนรูป เสียหาย หรือเกิดสนิม

กระจกด้านหน้าสามารถแตกได้เมื่อกระแทกแรงๆ โปรดใช้ความระมัดระวังเมื่อใช้เครื่องซักผ้า

- เมื่อกระจกแตก อาจทำให้เกิดการบาดเจ็บได้

หลังจากการจ่ายน้ำไม่ทำงานหรือเมื่อต่อท่อจ่ายน้ำใหม่ ให้เปิดก๊อกน้ำช้าๆ
เปิดก๊อกน้ำช้าๆ หลังจากไม่ได้ใช้งานมาเป็นเวลานาน

- แรงดันอากาศในท่อจ่ายน้ำหรือท่อน้ำประปาอาจทำให้ชิ้นส่วนของเครื่องเสียหายหรือทำให้น้ำรั่ว

ถ้าเกิดข้อผิดพลาดในการระบายน้ำระหว่างการทำงาน ให้ตรวจสอบว่ามีปัญหาของการระบายน้ำหรือไม่

- ถ้าใช้เครื่องซักผ้าเมื่อมีน้ำท่วม เนื่องจากปัญหาการระบายน้ำ อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้เนื่องจากไฟฟ้ารั่ว

ใส่ผ้าในเครื่องซักผ้าโดยระวังอย่าให้ผ้าติดอยู่ที่ประตู

- ถ้าผ้าติดอยู่ที่ประตู อาจทำให้ผ้าเสียหายหรือเครื่องซักผ้าเสียหาย หรือทำให้น้ำรั่ว

ตรวจสอบว่าปิดก๊อกน้ำไว้ เมื่อไม่ได้ใช้เครื่องซักผ้า

- ตรวจสอบว่าสกรูของข้อต่อท่อจ่ายน้ำนั้นมีการขันไว้อย่างถูกต้อง
- มิฉะนั้นอาจทำให้เกิดความเสียหายแก่ทรัพย์สินหรือเกิดการบาดเจ็บ

ตรวจสอบว่าซีลยางไม่ได้ปนเปื้อนสิ่งแปลกปลอม (สิ่งสกปรก เศษด้าย ฯลฯ)

- ถ้าไม่ได้ปิดประตูจนสนิท อาจทำให้น้ำรั่ว

เปิดก๊อกและตรวจสอบว่าข้อต่อของท่อจ่ายน้ำมีการขันไว้อย่างแน่นหนาแล้วหรือไม่ และไม่มีน้ำรั่ว ก่อนที่จะใช้ผลิตภัณฑ์

- ถ้าสกรูหรือข้อต่อท่อจ่ายน้ำหลวม อาจทำให้น้ำรั่ว

ในการลดความเสี่ยงที่จะเกิดไฟไหม้หรือระเบิด:

- ในบางกรณีอาจมีก๊าซไฮโดรเจนเกิดขึ้นในระบบน้ำร้อน เช่น เครื่องทำน้ำร้อนของคุณ ซึ่งไม่ได้ใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ก๊าซไฮโดรเจนนั้นสามารถระเบิดได้ ถ้าระบบน้ำร้อนของคุณไม่ได้มีการใช้งานเป็นเวลาสองสัปดาห์ขึ้นไป ให้เปิดก๊อกน้ำร้อนทั้งหมดในบ้านปล่อยให้น้ำไหลสักครู่ก่อนที่จะใช้เครื่องซักผ้า ซึ่งจะเป็นการระบายก๊าซไฮโดรเจนสะสม เนื่องจากก๊าซไฮโดรเจนนั้นเป็นวัตถุไวไฟ โปรดอย่าสูบบุหรี่หรือจุดไฟในระหว่างนี้ ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ ถ้ามีก๊าซรั่ว

ผลิตภัณฑ์ที่คุณซื้อนี้ได้รับการออกแบบมาสำหรับใช้ในครัวเรือนเท่านั้น

การใช้เพื่อธุรกิจจะถือเป็นการใช้ผิดวัตถุประสงค์
ในกรณีนี้ ผลิตภัณฑ์จะไม่ได้รับความคุ้มครองตามการรับประกันมาตรฐานที่มาจาก Samsung
และ Samsung จะไม่มีส่วนรับผิดชอบต่อการทำงานผิดปกติหรือความเสียหายที่เกิดจากการใช้ผิดวัตถุประสงค์ดังกล่าว

WD806U4SA-03223C-03_TH.indd 10 2015/5/27 9:25:42

อย่ายืนบนอุปกรณ์หรือวางสิ่งของ (เช่น ผ้า เทียนที่จุดไฟแล้ว บุหรี่ที่ติดไฟ จาน สารเคมี วัตถุที่เป็นโลหะ ฯลฯ) บนอุปกรณ์
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือปัญหากับผลิตภัณฑ์

ห้ามพ่นสารระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง
- นอกจากจะเป็นอันตรายต่อมนุษย์แล้ว ยังอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือมีปัญหากับผลิตภัณฑ์ได้

อย่าวางวัตถุที่สร้างสนามแม่เหล็กไฟฟ้าไว้ใกล้เครื่องซักผ้า
- อาจทำให้เกิดการบาดเจ็บเนื่องจากการทำงานผิดปกติได้

เนื่องจากน้ำที่ระบายระหว่างการซักผ้าอุณหภูมิสูงหรือรอบการอบแห้งนั้นจะร้อนจัด โปรดอย่าสัมผัสน้ำ
- อาจทำให้เกิดการลวกหรือบาดเจ็บได้

ห้ามซัก ปั่น หรืออบแห้งเบาะรองนั่ง เบาะ หรือเสื้อผ้า (*) ที่กันน้ำ ยกเว้นอุปกรณ์ของคุณมีโปรแกรมพิเศษสำหรับซักสิ่งของเหล่านี้
- อย่าซักเบาะที่หนาและแข็ง แม้ว่าจะมีสัญลักษณ์เครื่องซักผ้าบนป้ายดูแลผ้าก็ตาม
- อาจทำให้เกิดการบาดเจ็บหรือทำให้เครื่องซักผ้า ผนัง พื้น หรือผ้าเสียหาย เนื่องจากการสั่นสะเทือนมากเกินไป

* เครื่องนอนขนสัตว์ เสื้อกันฝน เสื้อชูชีพ กางเกงเล่นสกี ถุงนอน ผ้าปิดผ้าอ้อม ชุดกันลม และผ้าคลุมจักรยาน จักรยานยนต์ รถยนต์ ฯลฯ

อย่าใช้เครื่องซักผ้าขณะที่ถอดลิ้นซักใส่ผงซักฟอกออก
- อาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บเนื่องจากน้ำรั่ว

อย่าสัมผัสภายในของถังซักระหว่างหรือหลังจากการอบแห้ง เนื่องจากจะร้อนจัด
- อาจทำให้เกิดการร้อนลวกได้

อย่าสอดมือเข้าสู่ช่องใส่ผงซักฟอกหลังจากที่เปิดออก
- อาจทำให้เกิดการบาดเจ็บ เนื่องจากมืออาจติดอยู่ในช่องใส่ผงซักฟอก อย่าวางวัตถุใดๆ (เช่น รองเท้า เศษอาหาร สัตว์) นอกเหนือจากเสื้อผ้าในเครื่องซักผ้า
- อาจทำให้เกิดความเสียหายกับเครื่องซักผ้า หรือเกิดการบาดเจ็บหรือเสียชีวิตในกรณีของสัตว์เลี้ยง เนื่องจากการสั่นสะเทือนมากกว่าปกติ

อย่ากดปุ่มต่างๆ ด้วยของแหลม เช่น หมุด มีด เล็บ ฯลฯ
- อาจทำให้เกิดไฟฟ้าช็อตหรือบาดเจ็บได้

ห้ามซักผ้าที่เปื้อนน้ำมัน ครีม หรือโลชั่นทั่วไปที่ใช้ในร้านดูแลผิวหรือร้านนวด
- อาจทำให้ซีลยางเสื่อมสภาพและทำให้น้ำรั่ว

อย่าทิ้งโลหะ เช่น เข็มกลัดหรือกิ๊บติดผมหรือสารซักฟอกไว้ในถังซักเป็นเวลานาน
- อาจทำให้ถังซักขึ้นสนิม
- หากถังซักเริ่มมีลักษณะเป็นสนิมที่พื้นผิว ให้ใช้สารทำความสะอาด (ไม่เป็นกรดหรือด่าง) กับพื้นผิว และใช้ฟองน้ำทำความสะอาด ห้ามใช้แปรงขนลวดเด็ดขาด

ห้ามใช้สารทำความสะอาดแบบซักแห้งโดยตรงและห้ามซัก ล้าง หรือปั่นหมาดผ้าที่เปื้อนสารซักแห้ง
- อาจทำให้เกิดการติดไฟขึ้นในทันทีเนื่องจากความร้อนของการออกซิเดชันของน้ำมัน

ห้ามใช้น้ำร้อนจากอุปกรณ์ทำน้ำร้อน/น้ำเย็น
- อาจทำให้เครื่องซักผ้าเกิดปัญหา

WD806U4SA-03223C-03_TH.indd 11 2015/5/27 9:25:42

ข้อมูลเกี่ยวกับความปลอดภัย

ห้ามใช้สารซักฟอกสำหรับซักมือกับเครื่องซักผ้า
- ถ้ามีการแข็งตัวและสะสมอยู่ในเครื่องซักผ้า อาจทำให้เกิดปัญหากับผลิตภัณฑ์ ทำให้สีเปลี่ยน ขึ้นสนิม หรือทำให้มีกลิ่นอับ

ห้ามซักผ้าชิ้นใหญ่เช่นผ้าปูที่นอนในถุงซักผ้า
- ใส่ถุงเท้าและเสื้อชั้นในลงในถุงซักผ้าและซักร่วมกับผ้าอื่นๆ
- มิฉะนั้นอาจเกิดการบาดเจ็บเนื่องจากการสั่นสะเทือนผิดปกต

ห้ามใช้ผงซักฟอกแบบก้อน
- ถ้ามีการสะสมในเครื่อง อาจทำให้เกิดน้ำรั่ว

สำหรับเครื่องซักผ้าที่มีช่องระบายอากาศที่ฐาน โปรดอย่าให้พรมหรือวัสดุชนิดอื่นปิดกั้นช่องนี้

ตรวจสอบว่าไม่มีสิ่งใดอยู่ในกระเป๋าเสื้อผ้าที่จะซัก
- ของแข็ง ของมีคม เช่น เหรียญ เข็มกลัด ตะปู ตะปูควง หรือก้อนหินอาจทำให้เกิดความเสียหายแก่อุปกรณ์ได้

ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

คำเตือน สัญญาณคำเตือนสำคัญสำหรับการทำความสะอาด

ห้ามทำความสะอาดอุปกรณ์ด้วยการพ่นน้ำลงบนเครื่องโดยตรง
ห้ามใช้สารทำความสะอาดที่เป็นกรดรุนแรง
โปรดอย่าใช้สารเคมีเช่น เบนซิน ทินเนอร์ แอลกอฮอล์เพื่อทำความสะอาดอุปกรณ์
- อาจทำให้สีเปลี่ยน เสื่อมสภาพ เสียหาย เกิดไฟฟ้าช็อตหรือไฟไหม้

ก่อนที่จะทำความสะอาดหรือดูแลรักษาเครื่อง โปรดถอดปลั๊กของเครื่องออกจากแหล่งจ่ายไฟ หรือปิดเครื่องที่ปุ่มเปิด/ปิด
- มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม

WD806U4SA-03223C-03_TH.indd 12 2015/5/27 9:25:42

การติดตั้งเครื่องซักผ้า

โปรดให้ผู้ติดตั้งปฏิบัติตามคำแนะนำนี้อย่างเคร่งครัด เพื่อให้เครื่องซักผ้าใหม่ของคุณทำงานอย่างถูกต้อง และไม่เสี่ยงต่อการบาดเจ็บขณะซักผ้า

การตรวจสอบชิ้นส่วนอุปกรณ์

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์ และตรวจสอบว่าคุณได้รับชิ้นส่วนทั้งหมดที่แสดงด้านล่างนี้ ถ้าเครื่องซักผ้าของคุณได้รับความเสียหายระหว่างการขนส่ง หรือถ้าคุณไม่ได้รับชิ้นส่วนทั้งหมดครบถ้วน โปรดติดต่อฝ่ายบริการลูกค้าของ Samsung หรือตัวแทนจำหน่ายของ Samsung

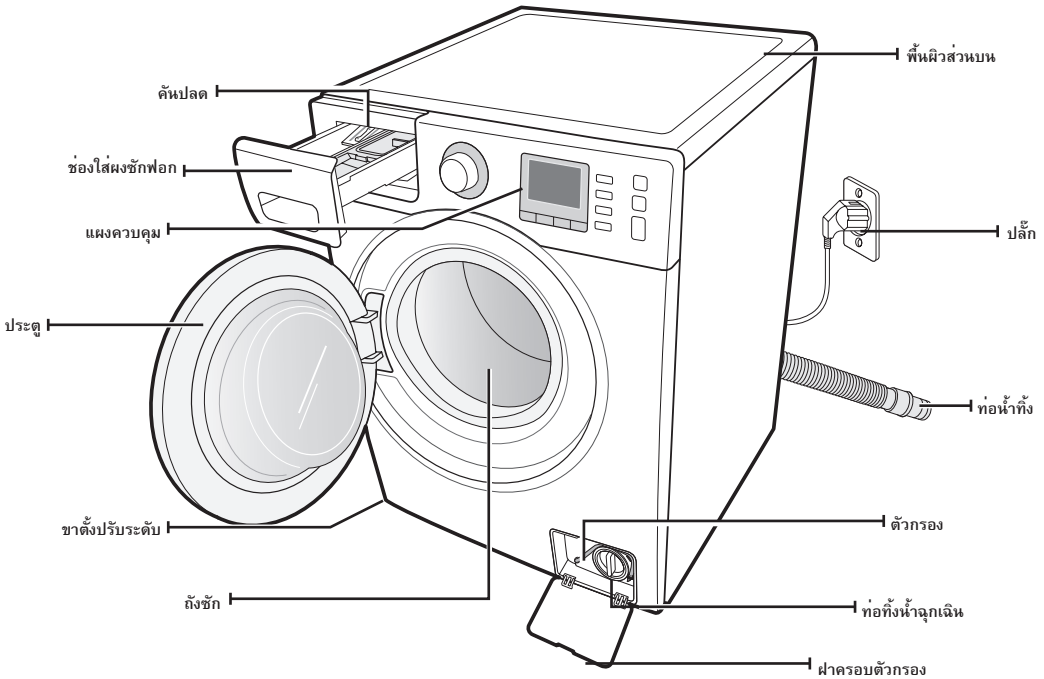

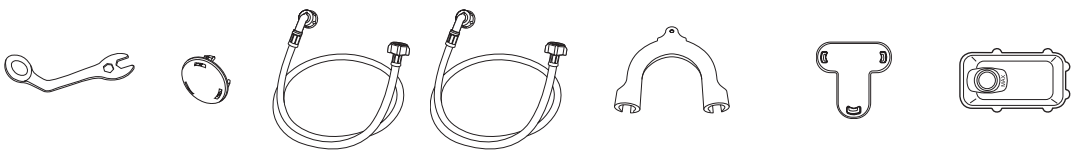

ประแจ	ที่ปิดช่องใส่หมุด	เย็น	ร้อน(เฉพาะบางรุ่น) ท่อจ่ายน้ำ	ตัวนำท่อ	แผ่นปิดช่อง (เฉพาะบางรุ่น)	ที่แบ่งสารซักฟอกชนิดน้ำ (เฉพาะบางรุ่น)

* **ที่ปิดช่องใส่หมุด** : จำนวนที่ปิดช่องใส่หมุดจะแตกต่างกันในแต่ละรุ่น (3-5 จุด)

WD806U4SA-03223C-03_TH.indd 13 2015/5/27 9:25:43

การติดตั้งเครื่องซักผ้า

การปฏิบัติตามข้อกำหนดในการติดตั้ง

คำเตือนเกี่ยวกับไฟฟ้าและการลงกราวด์

คำเตือน ห้ามใช้สายไฟสำหรับต่อ
ใช้สายไฟที่มากับเครื่องซักผ้าเท่านั้น

ขณะที่เตรียมพร้อมสำหรับการติดตั้ง โปรดตรวจสอบว่าแหล่งจ่ายไฟของคุณมีสิ่งต่อไปนี้:

- ฟิวส์หรือเบรกเกอร์ AC 220V 50Hz
- วงจรสาขาแยกสำหรับเครื่องซักผ้าโดยเฉพาะ

เครื่องซักผ้าต้องได้รับการลงกราวด์อย่างเหมาะสม ถ้าเครื่องซักผ้าทำงานผิดปกติหรือเสียหาย การลงกราวด์จะช่วยลดความเสี่ยงที่จะเกิดไฟฟ้าช็อต โดยจะเป็นทางระบายกระแสไฟฟ้าที่มีแรงต้านทานน้อยที่สุด
เครื่องซักผ้าของคุณมาพร้อมกับสายไฟที่มีปลั๊กลงกราวด์สามขา สำหรับใช้กับเต้าเสียบไฟฟ้าที่ติดตั้งและลงกราวด์อย่างเหมาะสม

ห้ามต่อสายกราวด์เข้ากับท่อพลาสติก ท่อก๊าซ หรือท่อน้ำร้อน

การเชื่อมต่อสายกราวด์อุปกรณ์อย่างไม่เหมาะสมจะทำให้เกิดไฟฟ้าช็อต
โปรดติดต่อช่างไฟฟ้าหรือช่างซ่อมบำรุงที่มีความชำนาญ ถ้าคุณสงสัยว่าเครื่องซักผ้ามีการลงกราวด์อย่างเหมาะสมหรือไม่ ห้ามดัดแปลงปลั๊กที่มากับเครื่องซักผ้า ถ้าไม่สามารถใช้ร่วมกับเต้าเสียบได้ โปรดให้ช่างที่มีความชำนาญเป็นผู้ติดตั้งเต้าเสียบที่เหมาะสม

การจ่ายน้ำ

เครื่องซักผ้าของคุณจะเติมน้ำอย่างเหมาะสมเมื่อมีแรงดันน้ำ 50 kPa ~ 800 kPa แรงดันน้ำต่ำกว่า 50 kPa จะทำให้วาล์วน้ำทำงานผิดพลาด ทำให้วาล์วน้ำไม่สามารถปิดอย่างเหมาะสม หรือมิฉะนั้น อาจทำให้เครื่องซักผ้าใช้เวลาในการเติมน้ำนานเกินกว่าที่ระบบควบคุมกำหนด ทำให้เครื่องซักผ้าปิดลง (ในระบบควบคุมมีขีดจำกัดเวลาการเติมน้ำ ได้รับการออกแบบเพื่อป้องกันน้ำล้น/ท่วมถ้าท่อน้ำหลวม)

ก๊อกน้ำต้องห่างไม่เกิน 120 ซม. จากด้านหลังของเครื่องซักผ้า เพื่อให้สามารถต่อท่อจ่ายน้ำที่ให้มากับเครื่องซักผ้าได้

ร้านจำหน่ายอุปกรณ์เดินท่อจะมีท่อจ่ายน้ำความยาวต่างๆ ถึง 305 ซม.

คุณสามารถลดความเสี่ยงของน้ำรั่วและความเสียหายจากน้ำโดย:

- ติดตั้งให้ท่อน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย
- ปิดก๊อกเมื่อไม่ได้ใช้งานเครื่องซักผ้า
- ตรวจสอบรอยรั่วที่ข้อต่อของท่อจ่ายน้ำเป็นประจำ

คำเตือน ก่อนที่จะใช้เครื่องซักผ้าเป็นครั้งแรก โปรดตรวจสอบการต่อท่อและวาล์วจ่ายน้ำเพื่อหารอยรั่ว

WD806U4SA-03223C-03_TH.indd 14 2015/5/27 9:25:43

การระบายน้ำ

Samsung แนะนำให้ใช้ท่อตั้งมีความสูง 65 ซม. ท่อระบายน้ำต้องวางผ่านคลิปท่อระบายน้ำไปยังท่อตั้งดังกล่าว ท่อตั้งจะต้องมีขนาดใหญ่พอที่จะรับเส้นผ่าศูนย์กลางภายนอกของท่อระบายน้ำ ท่อระบายน้ำติดมาจากโรงงาน

พื้น

เพื่อให้ได้ประสิทธิภาพสูงสุด โปรดติดตั้งเครื่องซักผ้าบนพื้นที่แข็งแรงมั่นคง พื้นไม้อาจต้องได้รับการเสริมแรงเพื่อลดการสั่นสะเทือน และ/หรือการรับน้ำหนักที่ขาดสมดุล พื้นผิวที่ปูพรมและวัสดุอ่อนนุ่มอาจทำให้เกิดการสั่นสะเทือน และอาจทำให้เครื่องซักผ้าเคลื่อนตัวเล็กน้อยระหว่างรอบการปั่นหมาด

ห้ามติดตั้งเครื่องซักผ้าบนที่ยกพื้นหรือโครงสร้างที่ไม่แข็งแรง

อุณหภูมิโดยรอบ

ห้ามติดตั้งเครื่องซักผ้าในพื้นที่ซึ่งน้ำอาจแข็งตัวได้ เนื่องจากเครื่องซักผ้าของคุณจะมีน้ำอยู่ในวาล์ว ปั๊ม และท่อเสมอ น้ำที่แข็งตัวในท่ออาจทำให้สายพาน ปั๊ม และองค์ประกอบอื่นๆ เสียหาย

การติดตั้งในซุ้มหรือตู้

ในการใช้งานอย่างปลอดภัยและเหมาะสม เครื่องซักผ้าต้องมีระยะห่าง:

ด้านข้าง – 25 มม.
ด้านบน – 25 มม.
ด้านหลัง – 50 มม.
ด้านหน้า – 465 มม.

ถ้าติดตั้งทั้งเครื่องซักผ้าและเครื่องอบผ้าไว้ด้วยกัน ด้านหน้าของซุ้มหรือตู้จะต้องมีช่องเปิดที่ไม่มีสิ่งกีดขวางอย่างน้อย 465 มม. เครื่องซักผ้าเพียงอย่างเดียวจะไม่ต้องมีช่องเปิดสำหรับอากาศโดยเฉพาะ

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 1
การเลือกที่ตั้ง

ก่อนที่จะติดตั้งเครื่องซักผ้า โปรดตรวจสอบว่าสถานที่ตั้ง:

- มีพื้นผิวแข็ง ได้ระดับ โดยไม่มีพรมหรือวัสดุปูพื้นที่อาจปิดกั้นการระบายอากาศ
- พ้นจากแสงแดดโดยตรง
- มีการระบายอากาศที่เพียงพอ
- ไม่ทำให้น้ำแข็งตัว (ต่ำกว่าh 0 °C)
- ห่างจากแหล่งความร้อน เช่น น้ำมันหรือก๊าซ
- มีพื้นที่ว่างเพียงพอที่ไม่ทำให้เครื่องซักผ้าทับสายไฟ

WD806U4SA-03223C-03_TH.indd 15 2015/5/27 9:25:43

การติดตั้งเครื่องซักผ้า

ขั้นตอนที่ 2

การถอดหมุดสำหรับการขนส่ง

ก่อนที่จะติดตั้งเครื่องซักผ้า คุณต้องนำหมุดสำหรับการขนส่งทั้งหมดออกจากด้านหลังของเครื่อง

1. คลายหมุดด้วยประแจที่ให้มา

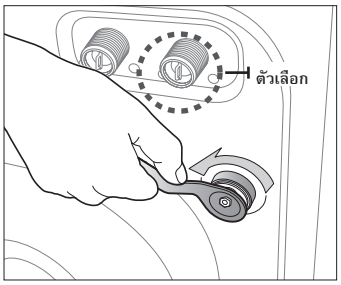

2. ดึงส่วนหัวของหมุดออกทางส่วนกว้างของช่อง ทำตามขั้นตอนนี้สำหรับหมุดแต่ละตัว

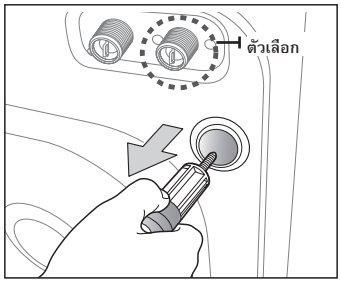

3. นำฝาปิดพลาสติกที่ให้มาใส่ในช่อง

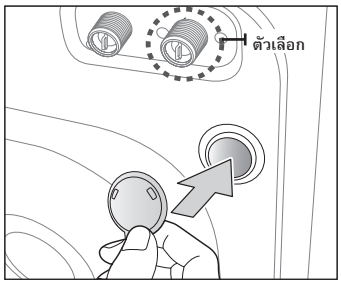

4. เก็บหมุดสำหรับขนส่งไว้ต่างหากในกรณีที่คุณต้องการย้ายเครื่องซักผ้าในอนาคต

คำเตือน

บรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้พ้นมือเด็ก

ใส่แผ่นปิดช่อง (อุปกรณ์เสริมที่อยู่ในชุด)ในช่องที่คุณนำสายไฟออกที่ด้านหลังของผลิตภัณฑ์ (เฉพาะบางรุ่น)

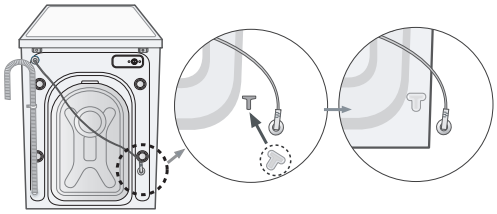

WD806U4SA-03223C-03_TH.indd 16 2015/5/27 9:25:43

ขั้นตอนที่ 3
การปรับขาตั้งปรับระดับ

เมื่อติดตั้งเครื่องซักผ้า ให้ตรวจสอบว่าปลั๊กไฟ ท่อจ่ายน้ำและท่อระบายน้ำอยู่ในระยะที่เอื้อมถึงได้ง่าย

1. เลื่อนเครื่องซักผ้าเข้าสู่ที่ติดตั้ง

2. ปรับระดับเครื่องซักผ้าด้วยการหมุนขาตั้งเข้าและออกด้วยมือตามความต้องการ

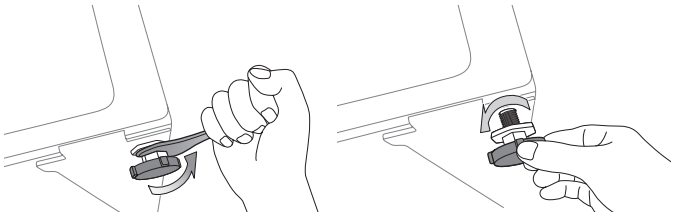

3. เมื่อเครื่องซักผ้าได้ระดับแล้ว ให้ขันน็อตให้แน่นโดยใช้ประแจที่ให้มาพร้อมกับเครื่องซักผ้า

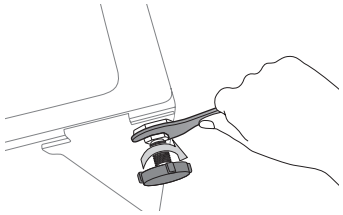

ขั้นตอนที่ 4
การต่อท่อจ่ายน้ำและท่อระบายน้ำ

การต่อท่อจ่ายน้ำ

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น

ท่อจ่ายน้ำจะต้องต่อเข้ากับเครื่องซักผ้าและต่อปลายอีกด้านเข้ากับก๊อกน้ำ โปรดอย่าดึงท่อจ่ายน้ำจนตึง หากท่อจ่ายน้ำสั้นเกินไป โปรดเปลี่ยนเป็นท่อแรงดันสูงที่ยาวขึ้น

2. ต่อปลายอีกด้านเข้ากับก๊อกน้ำเย็นที่อ่างซักล้าง และขันให้แน่นด้วยมือ หากจำเป็น คุณสามารถจัดตำแหน่งของท่อจ่ายน้ำที่เครื่องซักผ้าโดยคลายข้อต่อ หมุนสาย และขันข้อต่อเข้าที่อีกครั้ง

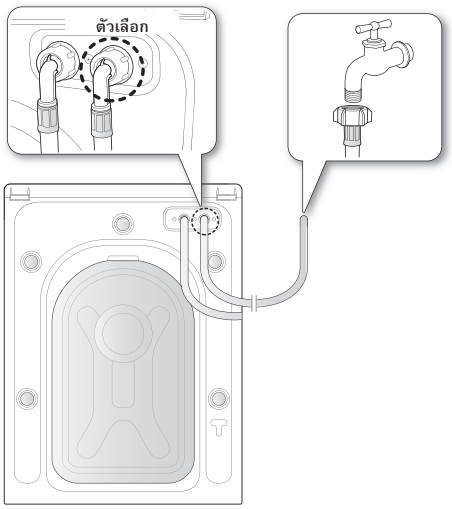

สำหรับบางรุ่นที่มีช่องรับน้ำร้อน:

1. นำข้อต่อรูปตัว L สำหรับท่อจ่ายน้ำเย็นมาต่อเข้ากับท่อน้ำเย็นที่ด้านหลังของเครื่องซักผ้า ใช้มือหมุนให้แน่น
2. เชื่อมต่อปลายอีกด้านหนึ่งของท่อจ่ายน้ำร้อนไปยังก๊อกประปาของน้ำร้อนและหมุนให้แน่นด้วยมือ
3. ใช้อุปกรณ์รูปตัว Y เฉพาะหากคุณต้องการใช้น้ำเย็น

WD806U4SA-03223C-03_TH.indd 17 2015/5/27 9:25:44

การติดตั้งเครื่องซักผ้า

การต่อท่อจ่ายน้ำ

1. ถอดข้อต่อออกจากท่อจ่ายน้ำ

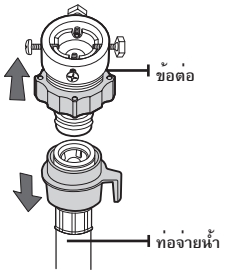

2. ใช้ไขควงแบบ “+” คลายสกรูที่ตัวแปลง ถัดจากนั้น ให้นำตัวแปลงมาหมุนส่วน (2) ตามลูกศร จนมีช่องว่าง 5 มม.

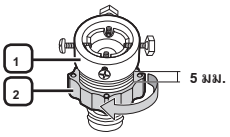

3. ต่อตัวแปลงเข้ากับก๊อกน้ำโดยขันสกรูให้แน่น และยกตัวแปลงขึ้น หมุนส่วน (2) ตามลูกศร และต่อ (1) เข้ากับ (2)

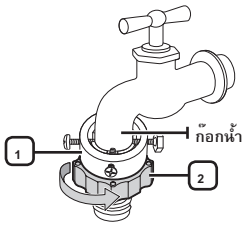

4. ให้ต่อท่อจ่ายน้ำเข้ากับข้อต่อตัวแปลง เมื่อปล่อยส่วน (3) ท่อจะต่อเข้ากับตัวแปลงโดยอัตโนมัติ พร้อมกับมีเสียง “คลิก”

หลังจากต่อท่อจ่ายน้ำเข้ากับข้อต่อแล้ว ให้ตรวจสอบว่ามีการเชื่อมต่ออย่างถูกต้อง โดยดึงท่อจ่ายน้ำลง

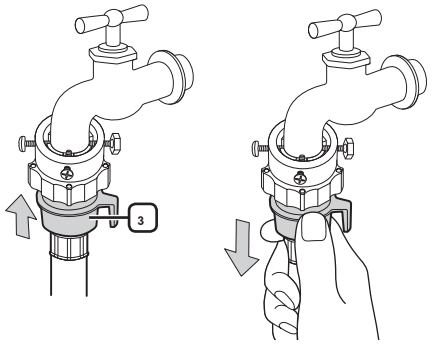

5. ต่อปลายอีกด้านของท่อจ่ายน้ำเข้ากับวาล์วน้ำเข้าที่ด้านหลังของเครื่อง ไขท่อตามเข็มนาฬิกาจนสุด

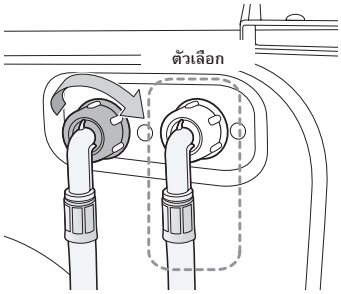

WD806U4SA-03223C-03_TH.indd 18 2015/5/27 9:25:44

6. เปิดน้ำ และดูว่าไม่มีน้ำรั่วจากวาล์วน้ำ ก๊อก หรือข้อต่อ ถ้ามีน้ำรั่ว ให้ทำตามขั้นตอนก่อนหน้านี้ซ้ำ

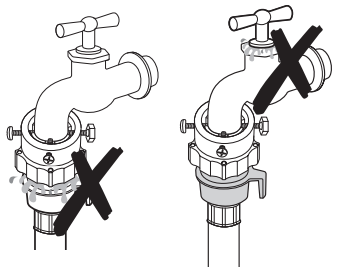

คำเตือน ห้ามใช้เครื่องซักผ้าถ้ามีน้ำรั่ว เนื่องจากอาจทำให้ไฟฟ้าช็อตหรือเกิดการบาดเจ็บได้

- หากก๊อกน้ำมีปากเป็นเกลียว ให้ต่อท่อจ่ายน้ำเข้ากับก๊อกตามภาพ

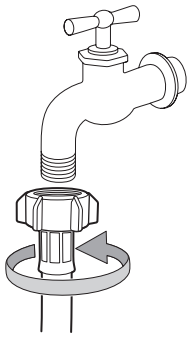

ใช้ก๊อกน้ำแบบทั่วไปในการจ่ายน้ำ หากก๊อกน้ำเป็นแบบเหลี่ยมหรือใหญ่เกินไป ให้นำวงแหวนออกก่อนที่จะต่อก๊อกเข้ากับตัวแปลง

การต่อท่อจ่ายน้ำ Aqua Hose (เฉพาะบางรุ่น)

ท่อจ่ายน้ำ Aqua Hose ได้รับการคิดค้นขึ้นเพื่อป้องกันการรั่วไหลได้อย่างสมบูรณ์แบบ โดยจะต่ออยู่กับท่อจ่ายน้ำและจะตัดน้ำโดยอัตโนมัติ ถ้าท่อเกิดความเสียหาย และจะแสดงสัญญาณเตือน

- ต่อท่อจ่ายน้ำเข้ากับก๊อกดังที่แสดง

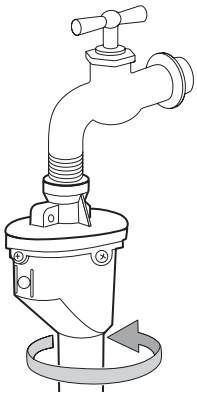

WD806U4SA-03223C-03_TH.indd 19 2015/5/27 9:25:44

การติดตั้งเครื่องซักผ้า

การต่อท่อน้ำทิ้ง

ปลายของท่อน้ำทิ้งจะสามารถอยู่ในตำแหน่งต่อไปนี้:

1. **พาดขอบอ่างซักล้าง** ท่อน้ำทิ้งจะต้องมีความสูงระหว่าง 60 ถึง 90 ซม. ในการติดตั้งให้ท่อน้ำทิ้งโค้งโดยไม่พับ ให้ใช้ตัวนำท่อที่ให้มา ยึดท่อเข้ากับผนังด้วยขอยึด หรือยึดเข้ากับก๊อกน้ำโดยใช้เชือก เพื่อไม่ให้ท่อน้ำทิ้งเคลื่อนตัว

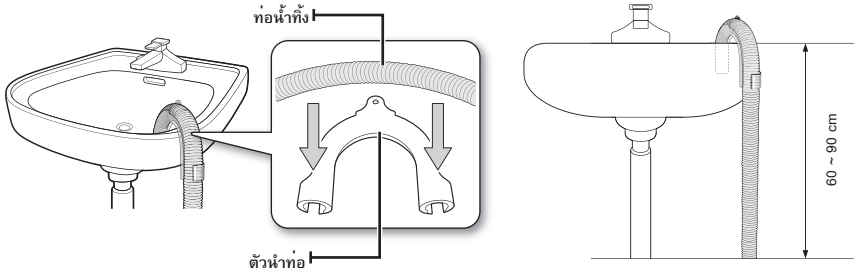

2. **ท่อแยกน้ำทิ้งของอ่างซักล้าง** ท่อแยกน้ำทิ้งจะต้องอยู่เหนือท่อพักของอ่าง เพื่อให้ปลายท่ออยู่เหนือพื้นดินอย่างน้อย 60 ซม.
3. **ในท่อน้ำทิ้ง** เราขอแนะนำให้คุณใช้ท่อแนวตั้งความสูง 65 ซม. ซึ่งจะต้องไม่สั้นกว่า 60 ซม. และไม่ยาวเกิน 90 ซม.

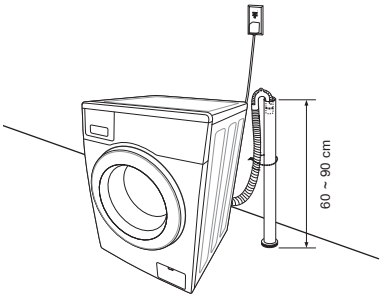

ท่อระบายน้ำจะต้องมี
- เส้นผ่าศูนย์กลางขั้นต่ำ 5 ซม.
- สามารถระบายน้ำได้ขั้นต่ำ 60 ลิตรต่อนาที

ขั้นตอนที่ 5
การต่อสายไฟของเครื่องซักผ้า

ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผนัง ซึ่งเป็นเต้ารับไฟฟ้า AC 220V / 50Hz ที่ผ่านการรับรองและมีการป้องกันด้วยฟิวส์หรือเบรกเกอร์วงจร (สำหรับข้อมูลเพิ่มเติมเกี่ยวกับข้อกำหนดด้านไฟฟ้าและการลงกราวด์ โปรดดูที่หน้า 14)

การใช้งานทดสอบ
โปรดตรวจสอบว่าคุณติดตั้งเครื่องซักผ้าอย่างถูกต้อง โดยทดลองใช้โปรแกรม **ล้างและปั่นหมาด** หลังจากที่ติดตั้งเสร็จ

ขั้นตอนที่ 6
โหมดการปรับตั้ง

เครื่องซักผ้า Samsung จะตรวจจับน้ำหนักผ้าโดยอัตโนมัติ เพื่อให้มีการตรวจจับน้ำหนักได้แม่นยำ โปรดเรียกใช้โหมดการปรับตั้งหลังจากติดตั้งอุปกรณ์ โหมดการปรับตั้งสามารถดำเนินการตามขั้นตอนต่อไปนี้

1. นำผ้าและสิ่งที่อยู่ในเครื่องออก และปิดเครื่อง
2. กดปุ่ม **อุณหภูมิ** และปุ่ม **ตั้งเวลาล่วงหน้า** พร้อมกัน และกดปุ่ม**เปิด/ปิด** จากนั้นเครื่องซักผ้าจะเปิดทำงาน และเข้าสู่ "โหมดการปรับตั้ง" จะมีข้อความ “CLB” ปรากฏ
3. กดปุ่ม **เริ่ม/พัก** เพื่อเปิดใช้งาน “โหมดการปรับตั้ง”
4. ถังซักจะหมุนทวนเข็มนาฬิกาและตามเข็มนาฬิกาเป็นเวลาประมาณ 3 นาที
5. เมื่อ “Calibration Mode” (โหมดการปรับตั้ง) สิ้นสุดลง ข้อความ “END/0(En)” จะปรากฏในหน้าจอแสดงผล และเครื่องจะปิดโดยอัตโนมัติ ขณะนี้เครื่องซักผ้าพร้อมใช้งานแล้ว

WD806U4SA-03223C-03_TH.indd 20 2015/5/27 9:25:45

การซักผ้า

เมื่อใช้เครื่องซักผ้าใหม่ของ Samsung สิ่งที่ยากที่สุดในการซักผ้าก็คือการตัดสินใจว่าจะซักผ้าชิ้นไหนก่อนดี

การซักครั้งแรก

ก่อนที่จะซักผ้าเป็นครั้งแรก คุณต้องเปิดเครื่องให้ทำงานครบทุกขั้นตอนโดยที่ถังซักว่าง (ไม่มีผ้า)

1. กดปุ่ม **เปิด/ปิด**
2. เติมผงซักฟอกปริมาณเล็กน้อยในช่องใส่ผงซักฟอก Ⅱ ในลิ้นชักผงซักฟอก
3. เปิดน้ำเข้าสู่เครื่องซักผ้า
4. กดปุ่ม **เริ่ม/พัก**

การทำงานนี้จะทิ้งน้ำที่หลงเหลืออยู่จากการทดสอบเครื่องของผู้ผลิต

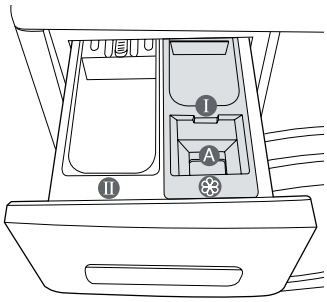

ช่องใส Ⅰ: ผงซักฟอกสำหรับการแช่ก่อนซัก หรือน้ำยาแช่ผ้า
ช่องใส Ⅱ: ผงซักฟอกสำหรับการซัก น้ำยาปรับสภาพน้ำ สารแช่ผ้า สารฟอกขาว และสารขจัดคราบ

ถ้าต้องการใช้น้ำยาซักผ้าเหลว ให้ใช้ที่แบ่งสารซักฟอกชนิดน้ำ (ดูหน้า 33 ของคู่มือสำหรับรุ่นที่ต้องการ) อย่าใส่ผงซักฟอกชนิดผงในช่องใส่สารซักฟอกชนิดน้ำ

ช่องใส ❀: สารเพิ่มเติม เช่น น้ำยาปรับผ้านุ่มหรือน้ำยารักษาเนื้อผ้า (ห้ามเติมเกินกว่าขอบด้านล่าง (MAX) ของ “A”)

คำแนะนำเบื้องต้น

1. ใส่ผ้าในเครื่องซักผ้า

คำเตือน
ห้ามใส่ผ้าเกินปริมาณที่กำหนด ถ้าต้องการทราบระดับความจุสำหรับผ้าแต่ละชนิด โปรดดูแผนผังในหน้า 31-32

- ตรวจสอบว่าผ้าไม่ติดกับประตู เนื่องจากจะทำให้น้ำรั่ว
- ผงซักฟอกอาจตกค้างอยู่ที่ส่วนของยางในเครื่องซักผ้าหลังจากรอบการซัก โปรดล้างผงซักฟอกที่หลงเหลือออก เนื่องจากอาจทำให้น้ำรั่วได้
- อย่าสัมผัสกระจกของประตูขณะที่เครื่องซักผ้าทำงาน เนื่องจากอาจร้อนจัด
- อย่าเปิดช่องใส่สารซักฟอกหรือตัวกรองเศษด้าย ขณะที่เครื่องซักผ้าทำงาน เนื่องจากอาจสัมผัสกับน้ำร้อนหรือไอน้ำ
- ห้ามซักผ้าที่มีคุณสมบัติกันน้ำในโปรแกรมปกติ ยกเว้นเมื่อใช้โปรแกรมซักคราบฝังลึก

2. ปิดประตูให้สลักล็อคเข้าที่
3. เปิดเครื่อง
4. เติมผงซักฟอกและสารเพิ่มเติมในช่องเติม
5. เลือกโปรแกรมซักและตัวเลือกการซักที่เหมาะสม
   ไฟสัญญาณการซักจะสว่าง และเวลาในการซักโดยประมาณจะปรากฏในจอแสดงผล
6. กดปุ่ม **เริ่ม/พัก**

WD806U4SA-03223C-03_TH.indd 21 2015/5/27 9:25:46

การซักผ้า

การใช้แผงควบคุม

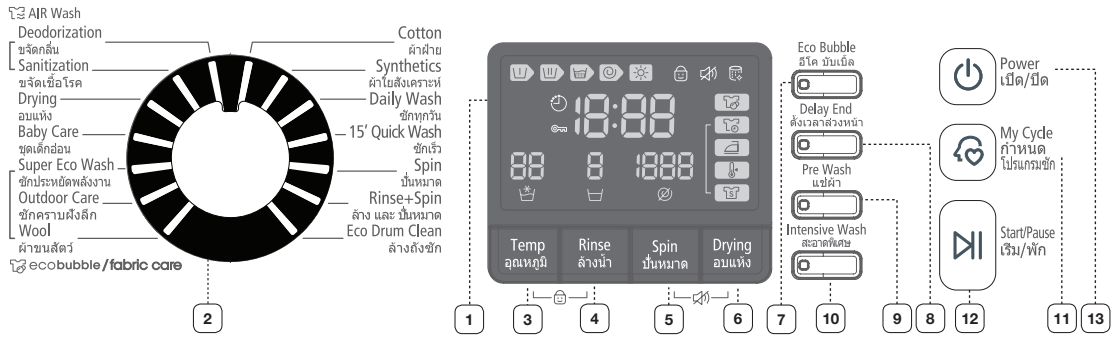

1 **จอแสดงผลดิจิตัล**	แสดงเวลาของรอบการซักที่เหลือ ข้อมูลการซัก และข้อความแสดงข้อผิดพลาด
2 **ปุ่มเลือกโปรแกรมซัก**	เลือกรูปแบบการหมุนของถังซักและความเร็วการปั่นหมาดสำหรับรอบการซัก สำหรับข้อมูลโดยละเอียด โปรดดูที่ “การซักผ้าโดยใช้ปุ่มเลือกโปรแกรมซัก” (โปรดดูหน้า 30) **ผ้าฝ้าย** - สำหรับผ้าฝ้ายทั่วไปหรือสกปรกน้อย ผ้าปูที่นอน ผ้าปูโต๊ะ ชุดชั้นใน ผ้าเช็ดตัว เชิ้ต ฯลฯ **ผ้าใยสังเคราะห์** - สำหรับเสื้อ เสื้อเชิ้ต ฯลฯ ที่เปื้อนปานกลางถึงเล็กน้อย ทำจากโพลีเอสเตอร์ (ไดโอเลน, เทรวิรา) โพลีอาไมด์ (เพอร์ลอน ไนลอน) หรือส่วนผสมอื่นๆ **ซักทุกวัน** - ใช้สำหรับการซักผ้าที่ใช้ทุกวัน เช่น ชุดชั้นในและเชิ้ต **ซักเร็ว** - สำหรับผ้าที่สกปรกน้อยและมีน้ำหนักน้อยกว่า 2 กก. ที่ต้องการซักอย่างรวดเร็ว • การตั้งค่า (15 นาที) สามารถแตกต่างจากค่าที่ระบุไว้ได้ โดยขึ้นอยู่กับแรงดันน้ำ ความกระด้างของน้ำ อุณหภูมิของน้ำที่ปล่อยเข้าเครื่อง อุณหภูมิห้อง ประเภทและปริมาณการซักและระดับของความสกปรก ผงซักฟอกที่ใช้ ความผันผวนของกระแสไฟฟ้า และตัวเลือกพิเศษที่เลือก • ใส่ผงซักฟองจำนวนเล็กน้อยสำหรับการการซักปริมาณน้อย (น้อยกว่า 2 กิโลกรัม) สำหรับโปรแกรมซักเร็ว 15 นาที ถ้าคุณใส่ผงซักฟอกมากเกินไป ผงซักฟอกอาจจะตกค้างภายหลังจากการซักได้ **ปั่นหมาด** - ปั่นหมาดเพิ่มเพื่อเอาน้ำออกจากผ้ามากขึ้น **ล้าง และ ปั่นหมาด** - ใช้สำหรับผ้าที่ต้องการล้างเท่านั้น หรือเติมน้ำยาปรับผ้านุ่มที่เติมระหว่างการล้างผ้า **ล้างถังซัก** - ใช้สำหรับล้างถังซัก เป็นการขจัดสิ่งสกปรกและแบคทีเรียในถังซัก ขอแนะนำให้ใช้เป็นประจำ (หลังจากซักผ้า 40 ครั้ง) ไม่จำเป็นต้องใส่สารซักฟอกหรือสารฟอกขาว **Air Wash (แอร์วอช)** - เหมาะสำหรับการขจัดกลิ่นอับ หมุน ปุ่มเลือกโปรแกรมซัก ตามโหมดการทำงานต่างๆต่อไปนี้ (ขจัดกลิ่น→ขจัดเชื้อโรค) • **ขจัดกลิ่น** - ลดกลิ่นอับจากผ้า • **ขจัดเชื้อโรค** - ขจัดกลิ่นอับและขจัดเชื้อโรคในผ้าด้วยการทำงานของแอร์วอชที่มีอุณหภูมิสูงขึ้น **อบแห้ง** - เลือกโปรแกรมนี้เพื่ออบผ้าแห้งโดยอัตโนมัติ ด้วยการตรวจหาปริมาณและน้ำหนักผ้า **ชุดเด็กอ่อน** - การซักด้วยอุณหภูมิสูง และล้างน้ำมากเป็นพิเศษ เพื่อให้มั่นใจว่าจะไม่มีผงซักฟอกหลงเหลืออยู่บนเสื้อผ้า **ซักประหยัดพลังงาน** - การซักฟองแบบประหยัดด้วยอุณหภูมิต่ำช่วยให้มั่นใจว่าจะได้ผลการซักที่ดีเยี่ยม และประหยัดพลังงาน

WD806U4SA-03223C-03_TH.indd 22 2015/5/27 9:25:46

	ซักคราบฝังลึก - ใช้สำหรับเสื้อผ้าที่ใช้กลางแจ้ง เช่น เสื้อผ้าสำหรับปีนเขา เล่นสกี หรือชุดกีฬา เนื้อผ้าประกอบด้วยเทคโนโลยีการเคลือบและเส้นใยเช่น สแปนเด็กซ์ ผ้ายืด และไมโครไฟเบอร์ **ผ้าขนสัตว์** - เฉพาะสำหรับขนสัตว์ที่ซักด้วยเครื่องได้ ผ้าควรมีน้ำหนักไม่เกิน 2.0 กก. • โปรแกรมผ้าขนสัตว์จะซักผ้าโดยใช้การหมุนแบบนุ่มนวล ระหว่างการซัก การหมุนและการแช่ที่นุ่มนวลจะ คุ้มครองเส้นใยผ้าขนสัตว์ไม่ให้หดตัว/ผิดรูป และเพื่อให้มีความสะอาดพร้อมกับการถนอมผ้า การหยุดทำงานใน ระหว่างนี้ไม่ใช่ปัญหาแต่อย่างใด • ขอแนะนำให้ใช้สารซักฟอกที่มีฤทธิ์เป็นกลางสำหรับโปรแกรมผ้าขนสัตว์ เพื่อให้ผลการซักดียิ่งขึ้นและเพื่อรักษาเนื้อผ้า **ระบายน้ำเท่านั้น** – หมุนปุ่มเลือกโปรแกรมซักไปตำแหน่งปั่นหมาด กดปุ่มปั่นหมาดซ้ำๆ จนกระทั่งไฟ "ไม่ปั่นหมาด (⊘)" สว่างขึ้น จากนั้นกดเริ่ม/พักเพื่อระบายน้ำ
3 ปุ่มเลือกอุณหภูมิ	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกอุณหภูมิของน้ำ: (: น้ำเย็น , 20 °C, 30 °C, 40 °C , 60 °C และ 95 °C)
4 ปุ่มเลือกการล้างน้ำ	กดปุ่มนี้เพื่อเพิ่มรอบการล้างน้ำ จำนวนรอบการล้างสูงสุดคือห้ารอบ
5 ปุ่มเลือกการปั่นหมาด	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกความเร็วในการปั่นหมาด WD806U4: ⊘, 400, 800, 1200, 1400 รอบต่อนาที **"ไม่ปั่นหมาด ⊘"** - ผ้าจะอยู่ในถังและไม่มีการปั่นหมาดหลังจากการระบายน้ำครั้งสุดท้าย **"หยุดการล้างน้ำ "** - ผ้าจะแช่อยู่ในน้ำล้างรอบสุดท้าย ก่อนที่จะนำผ้าออกจากเครื่อง จะต้องมีการใช้โปรแกรม Drain (ทิ้งน้ำ) หรือ Spin (ปั่น) ก่อน
6 ปุ่ม อบแห้ง	กดปุ่มนี้เพื่อเลือกตัวเลือกดังต่อไปนี้ **Cup Board (มาตรฐาน)** → **Low Temp (อุณหภูมิต่ำ)** → **Iron (รีดผ้า)** → **Time Dry (ตั้งเวลาอบแห้ง)** (30min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → **Cup Board (มาตรฐาน)** **Cup Board (มาตรฐาน)** - ใช้โปรแกรมนี้เพื่ออบแห้งผ้าฝ้าย ชุดชั้นใน และผ้าลินิน **Low Temp (อุณหภูมิต่ำ)** - ใช้โปรแกรมนี้เพื่อถนอมผ้าที่ไวต่อความร้อน โดยใช้อุณหภูมิการอบแห้งที่ต่ำ **Iron (รีดผ้า)** - สิ้นสุดรอบการอบแห้งโดยที่ผ้ายังชื้นและเหมาะกับการรีด **Time Dry (ตั้งเวลาอบแห้ง)** -อบผ้าแห้งตามเวลาที่ระบุ • โปรดหลีกเลี่ยงการซักผ้าที่ไม่สามารถอบแห้ง เนื่องจากอาจเสียรูปทรงแม้เมื่อใช้อุณหภูมิต่ำ • รอบ Cup Board (มาตรฐาน) Low Temp (อุณหภูมิต่ำ), Iron (รีดผ้า) และ Time Dry (ตั้งเวลาอบแห้ง) จะตรวจหาน้ำหนักของผ้าเพื่อแสดงเวลาในการอบแห้งที่ถูกต้อง • สภาพการอบแห้งอาจแตกต่างกันไปตามประเภทและปริมาณของผ้า • อบแห้ง - ไม่มีในโปรแกรมล้างถังซัก แอร์วอช ซักคราบฝังลึก ผ้าขนสัตว์
7 ปุ่มเลือกซักฟองแบบประหยัด	การเลือกซักฟองแบบประหยัดจะทำงานเป็นค่าเริ่มต้น กดปุ่มซักฟองแบบประหยัดหนึ่งครั้งเพื่อยกเลิกการเลือกและปิดเครื่องสร้างฟอง (แสดงบนแผงควบคุม) กดอีกครั้งเพื่อเปิดฟังก์ชั่น • โปรแกรมซักบางโปรแกรมต้องมีการเปิดตัวเลือกซักฟองแบบประหยัด (จะแสดงบนแผงควบคุม และเครื่องสร้างฟองจะทำงานโดยอัตโนมัติ) • โปรแกรมซักอื่นๆ ไม่ต้องมีตัวเลือกนี้และจะเปิดเครื่องสร้างฟองโดยอัตโนมัติ • ในหลายโปรแกรม คุณสามารถปรับตัวเลือกนี้ได้ ซึ่งจะมีผลกับเวลาในการซักที่แสดงบนแผงควบคุม (โปรดดูข้อมูลเพิ่มเติมในหน้า 27)
8 ปุ่มเลือกตั้งเวลาซักล่วงหน้า	กดปุ่มนี้ซ้ำๆ เพื่อเลือกตัวเลือกการตั้งเวลาล่วงหน้าที่ใช้ได้ (ตั้งแต่ 3 ถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง
9 ปุ่มเลือกแช่ผ้า	กดปุ่มนี้เพื่อเลือกแช่ผ้าก่อนซัก การแช่ผ้าก่อนซักสามารถใช้ได้กับ: ผ้าฝ้าย ผ้าใยสังเคราะห์ ซักทุกวัน ชุดเด็กอ่อน ซักประหยัดพลังงาน

WD806U4SA-03223C-03_TH.indd 23 2015/5/27 9:25:47

การซักผ้า

10 **ปุ่มเลือก ซักมากเป็นพิเศษ**	กดปุ่มนี้เมื่อผ้าเปื้อนมากและต้องการการซักล้างมากเป็นพิเศษ เวลาของรอบการซักจะเพิ่มขึ้นสำหรับแต่ละรอบ
11 **ปุ่มเลือกกำหนดโปรแกรม**	เลือกโปรแกรมซักที่ต้องการ รวมถึงอุณหภูมิ การปั่นหมาด ระดับความสกปรก เลือกการทำงาน
12 **ปุ่มเริ่ม/พัก**	กดปุ่มนี้เพื่อเริ่มต้นและหยุดโปรแกรมต่างๆ
13 **ปุ่มเปิด/ปิด**	กดปุ่มนี้หนึ่งครั้งเพื่อเปิดใช้เครื่องซักผ้า และกดอีกครั้งเพื่อปิดเครื่อง หากเครื่องซักผ้าถูกเปิดทิ้งไว้นานกว่า 10 นาทีโดยไม่มีการกดปุ่มใดๆ เครื่องจะปิดเองโดยอัตโนมัติ

WD806U4SA-03223C-03_TH.indd 24 2015/5/27 9:25:47

ล็อคป้องกันเด็ก

ฟังก์ชันล็อคป้องกันเด็กจะใช้ล็อคปุ่ม เพื่อป้องกันการเปลี่ยนรอบการซักที่คุณเลือกไว้

การเปิดใช้/การปิด

ถ้าต้องการเปิดหรือปิดฟังก์ชั่นล็อคป้องกันเด็ก ให้กดปุ่ม **อุณหภูมิ** และ **ล้างน้ำ** พร้อมกันเป็นเวลา 3 วินาที สัญญาณ "**ล็อคป้องกันเด็ก**" จะสว่างเมื่อใช้งานฟังก์ชั่นนี้

ขณะที่ใช้ฟังก์ชันล็อคป้องกันเด็ก จะมีเพียงปุ่ม **เปิด/ปิด** เท่านั้นที่ใช้ได้ ฟังก์ชันล็อคป้องกันเด็กจะทำงานแม้ว่าจะเปิดหรือปิดเครื่อง หรือหลังจากถอดปลั๊กและเสียบปลั๊กใหม่

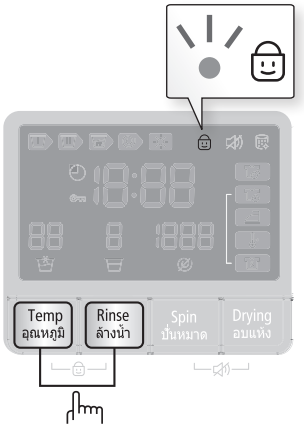

3 วินาที

ปิดเสียง

สามารถเลือกฟังก์ชันปิดเสียงได้กับทุกโปรแกรม เมื่อมีการเลือกฟังก์ชันนี้ เสียงจะถูกปิดสำหรับทุกโปรแกรม แม้ว่าจะเปิดหรือปิดเครื่องซ้ำๆ
การตั้งค่านี้ก็ยังคงทำงานอยู่

การเปิดใช้/การปิด

ถ้าต้องการเปิดหรือปิดฟังก์ชั่นปิดเสียง ให้กดปุ่ม **ปั่นหมาด** และ **อบแห้ง**
พร้อมกันเป็นเวลา 3 วินาที สัญญาณ "**ปิดเสียง**" จะสว่างเมื่อเปิดใช้งานคุณสมบัตินี้

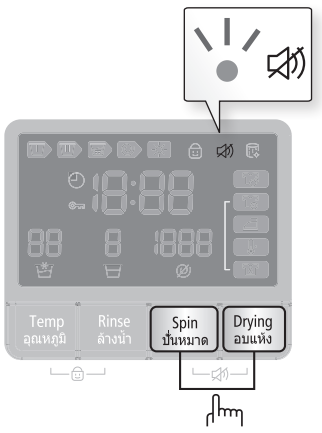

3 วินาที

ตั้งเวลาล่วงหน้า

คุณสามารถกำหนดให้เครื่องซักผ้าเสร็จในเวลาอื่นโดยอัตโนมัติ โดยเลือกได้ตั้งแต่ 3 ถึง 19 ชั่วโมง (เพิ่มได้ครั้งละ 1 ชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง

1. กำหนดเครื่องซักผ้าด้วยตนเองหรือซักอัตโนมัติตามประเภทของผ้าที่ซัก
2. กดปุ่ม **ตั้งเวลาล่วงหน้า** ซ้ำๆ เพื่อตั้งเวลา
3. กดปุ่ม **เริ่ม/พัก** สัญญาณ "**ตั้งเวลาล่วงหน้า**" จะกะพริบและนาฬิกาจะเริ่มนับถอยหลังจนกระทั่งถึงเวลาที่กำหนดไว้
4. ในการยกเลิกฟังก์ชันตั้งเวลาล่วงหน้า ให้กดปุ่ม **เปิด/ปิด** จากนั้นเปิดเครื่องอีกครั้ง

WD806U4SA-03223C-03_TH.indd 25 2015/5/27 9:25:53

การซักผ้า

ระบายน้ำเท่านั้น

เมื่อคุณต้องการระบายน้ำออกจากเครื่องซักผ้าเพียงอย่างเดียว ให้ทำตามคำแนะนำด้านล่างนี้

1. กดปุ่ม **เปิด/ปิด**
2. หมุนปุ่มเลือกโปรแกรมซัก ไปที่ตำแหน่งปั่นหมาด
3. กดปุ่มปั่นหมาดซ้ำๆ จนกระทั่งไฟ "ไม่ปั่นหมาด(⌀)" สว่างขึ้น
4. กดปุ่ม **เริ่ม/พัก**

กำหนดโปรแกรม

ใช้สำหรับเปิดใช้การซักที่กำหนดเอง (อุณหภูมิ การปั่นหมาด ระดับความสกปรก ฯลฯ) ด้วยความสะดวกเพียงปุ่มเดียว
เมื่อกดปุ่ม **กำหนดโปรแกรม** คุณสามารถกดปุ่มกำหนดโปรแกรมเพื่อโหลดผ้า และใช้ตัวเลือกของการกำหนดโปรแกรมที่บันทึกไว้ นอกจากนี้ ไฟของโปรแกรมและการเลือกการทำงานจะกะพริบ
คุณสามารถตั้งค่าตัวเลือกทั้งหมดดังนี้ในโหมดกำหนดโปรแกรม

1. เปิดท่อจ่ายน้ำ
2. กดปุ่ม **เปิด/ปิด**
3. เลือกโปรแกรมโดยใช้ **ปุ่มเลือกโปรแกรม**
4. หลังจากเลือกโปรแกรม ให้ตั้งค่าตัวเลือกแต่ละตัว

ดู "ผังโปรแกรม" ในหน้า 41 เพื่อดูการตั้งค่าตัวเลือกที่ใช้ได้สำหรับแต่ละโปรแกรม

5. จากนั้นคุณสามารถบันทึกโปรแกรมและตัวเลือกที่เลือกไว้ ด้วยการกดปุ่ม กำหนดโปรแกรม ค้างไว้มากกว่า 3 วินาทีในโหมดกำหนดโปรแกรม โปรแกรมและตัวเลือกที่คุณเลือกจะปรากฏในครั้งถัดไปที่คุณเลือก กำหนดโปรแกรม

คุณสามารถเปลี่ยนการตั้งค่า กำหนดโปรแกรม ด้วยการทำตามกระบวนการข้างต้นซ้ำ
การตั้งค่าล่าสุดจะถูกนำมาใช้เมื่อคุณเลือก กำหนดโปรแกรม ในครั้งถัดไป

ถ้าคุณกด กำหนดโปรแกรม และปล่อยภายใน 3 วินาที โปรแกรมและตัวเลือกที่บันทึกไว้ก่อนหน้านั้นจะปรากฏ ถ้าคุณกด กำหนดโปรแกรม ค้างไว้ 3 วินาทีขึ้นไป โปรแกรมและตัวเลือกที่ตั้งไว้ปัจจุบันจะถูกบันทึก และ LED จะกะพริบเป็นเวลา 3 วินาที

WD806U4SA-03223C-03_TH.indd 26 2015/5/27 9:25:54

การซักผ้า

AIR Wash

ระบบ Air Wash (แอร์วอช) จะช่วยคืนความสดชื่นให้กับผ้าโดยไม่ต้องใช้น้ำ ด้วยระบบซักด้วยอากาศที่ทรงพลัง สามารถใช้กับผ้าชนิดต่างๆ เช่นโค้ทขนสัตว์ ผ้าฝ้าย หรือเสื้อไหมพรมและสูท [ไม่เกินสองชิ้น (น้อยกว่า 1 กิโลกรัม)]

1. เปิดประตู ใส่ผ้าในเครื่อง และปิดประตู
2. กดปุ่ม **เปิด/ปิด**
3. เลือก **Air Wash (แอร์วอช)** ด้วยการหมุน **ปุ่มเลือกโปรแกรมซัก**

โหมด	เวลาของรอบ
ขจัดกลิ่น	29 นาที
ขจัดเชื้อโรค	59 นาที

- เมื่อเลือกตัวเลือกเหล่านี้ จะไม่สามารถเลือกปุ่มอื่น และคุณสามารถเลือกตั้งเวลาซักล่วงหน้าได้ระหว่าง: 3:00 – 19:00

4. ปิดประตูและกดปุ่ม **เริ่ม/พัก**

- เมื่อมีน้ำในถังซัก จะไม่สามารถเลือก **AIR Wash** ได้ โปรดระบายน้ำในถังและเลือก **AIR Wash**
- กดปุ่ม **เริ่ม/พัก** หรือปุ่ม **เปิด/ปิด** เพื่อเอาผ้าออก
- สามารถใช้แผ่นหอมร่วมกับโปรแกรม AIR Wash เพื่อเพิ่มความหอมให้กับผ้า (หนึ่งแผ่นต่อผ้าหนึ่งหรือสองชิ้น)

หลีกเลี่ยงการใช้ AIR Wash กับผ้าต่อไปนี้:

- ผ้าที่มีความละเอียดอ่อน ทำจากหนัง มิงค์ ขนเฟอร์ ไหม ฯลฯ
- ชุดชั้นในที่มีลูกไม้ การบุที่ใช้ 'กาว' และชุดที่อาจมีเครื่องประดับหลุดร่วงได้
- ผ้าที่มีกระดุมอาจเสี่ยงต่อปัญหากระดุมแตก
- ผ้าที่ลงแป้งอาจเสียรูป
- ผ้าปูที่นอนที่แข็ง เช่น หมอนไม้ (ที่พักคอ)
  - หมอนหรือผ้าห่มที่มีพลาสติกหรือวัสดุอื่นที่ไม่ใช่ผ้าย
  - ผ้าห่มไฟฟ้า
- ผ้าห่มขนสัตว
- ผ้าห่มนวม
- หมอนยาง

WD806U4SA-03223C-03_TH.indd 28 2015/5/27 9:25:54

การใช้โปรแกรมอบแห้ง

ดูฉลากสำหรับการอบแห้ง และตรวจสอบว่าใส่ผ้าให้ต่ำกว่าระดับของขีดสำหรับผ้าแห้ง 6.0 กก.(5.0 กก.) (เฉพาะบางรุ่น)

1. เปิดฝาเครื่อง ใส่ผ้าและปิดฝาเครื่อง
2. กดปุ่ม **เปิด/ปิด** และกด **อบแห้ง**
   : เครื่องจะเลือกโปรแกรมมาตรฐานโดยอัตโนมัติ
   อบแห้ง - ไม่มีในโปรแกรมล้างถังซัก แอร์วอช ซักคราบฝังลึก ผ้าขนสัตว์
3. เลือก **อบแห้ง** ดังน
   โปรแกรมอบแห้ง

   - เมื่อกดปุ่มแต่ละครั้งจะเป็นการเลือกประเภทการอบแห้งตามลำดับดังนี้:
     Cup Board (มาตรฐาน) → **Low Temp (อุณหภูมิต่ำ)** → **Iron (รีดผ้า)** → **Time Dry (ตั้งเวลาอบแห้ง)** (30 min. → 1:00 h → 1:30 h → 2:00 h → 2:30 h → 3:00 h → 3:30 h → 4:00 h → 4:30 h) → **Cup Board (มาตรฐาน)**

ประเภทการอบแห้ง		ข้อมูล	เวลา(น้ำหนักสูงสุด)
การอบแห้งอัตโนมัต	**Cupboard(มาตรฐาน)**	มาตรฐาน: อบผ้าแห้ง	180นาที
	Low Temp(อุณหภูมิต่ำ)	อบผ้าแห้งโดยใช้อุณหภูมิต่ำเพื่อถนอมเนื้อผ้า	200นาที
	Iron (รีดผ้า)	อบให้ผ้าหมาดเพื่อให้สามารถรีดง่าย	140นาที
Time Dry (ตั้งเวลาอบแห้ง)		คุณสามารถเลือกเวลาอบแห้งที่ต้องการตามเนื้อผ้าปริมาณ และความชื้น	270นาที

- สำหรับโปรแกรมอบแห้งอัตโนมัติ เครื่องจะแสดงเวลาที่อบแห้งโดยอัตโนมัติโดยการคำนวณจากน้ำหนักของเสื้อผ้าก่อนการอบแห้ง และปรับเวลาเพื่อความเหมาะสม
- **สำหรับผ้าที่หนักน้อยกว่า 3.0 กก. ให้ใช้การอบแห้งอัตโนมัติ สำหรับผ้าที่หนักมากกกว่านั้น ให้ใช้การตั้งเวลาอบแห้ง**
- ถ้าเลือกทั้งโปรแกรมปั่นหมาดและอบแห้ง ความเร็วของการปั่นหมาดจะถูกเลือกโดยอัตโนมัติเพื่อปรับปรุงประสิทธิภาพของการอบแห้ง
- เมื่อใช้โปรแกรมอบแห้ง ให้ตรวจสอบว่าวาล์วจ่ายน้ำเปิดอยู่

4. เติมสารซักฟอกและน้ำยาปรับผ้านุ่มในปริมาณที่เหมาะสมในช่องใส่ และปิดช่องใส่
5. กดปุ่ม **เริ่ม/พัก**
   : เครื่องจะกำหนดการทำงานที่เหมาะสม จากการตรวจจับน้ำหนักของผ้า
   - ไม่สามารถแก้ไขโปรแกรมที่เลือกได้ หลังจากเริ่มต้นการอบแห้ง
   - ถ้าไม่มีการจ่ายน้ำเย็น การอบแห้งจะไม่ทำงาน
   - ถ้าคุณต้องการอบผ้าหลังจากซักมือ ให้เลือกทั้งปั่นหมาดและอบแห้งพร้อมกัน

WD806U4SA-03223C-03_TH.indd 29 2015/5/27 9:25:54

การซักผ้า

การซักโดยใช้ปุ่มเลือกโปรแกรมซัก

เครื่องซักผ้าของคุณทำให้งานซักกลายเป็นเรื่องง่าย ด้วยระบบควบคุมอัตโนมัติ "ฟัซซี่คอนโทรล" ของ Samsung เมื่อคุณเลือกโปรแกรมซัก เครื่องจะกำหนดอุณหภูมิ เวลาซัก และความเร็วในการซักให้

1. เปิดก๊อกน้ำที่อ่างซักล้าง
2. กดปุ่ม **เปิด/ปิด**
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. เติมผงซักฟอก น้ำยาปรับผ้านุ่ม และน้ำยาแช่ผ้า (ถ้าจำเป็น) ในช่องที่เหมาะสม

ฟังก์ชั่นแช่ผ้าจะใช้ได้เฉพาะเมื่อเลือกรอบการซักของ ผ้าฝ้าย ผ้าใยสังเคราะห์ ซักทุกวัน ชุดเด็กอ่อน ซักประหยัดพลังงาน และจำเป็นเฉพาะกรณีที่ผ้าเปื้อนมากเท่านั้น

7. ใช้ **ปุ่มเลือกโปรแกรมซัก** เพื่อเลือกโปรแกรมซักที่เหมาะสมตามประเภทเนื้อผ้า: ผ้าฝ้าย ผ้าใยสังเคราะห์ ซักทุกวัน ซักเร็ว ชุดเด็กอ่อน ซักประหยัดพลังงาน ซักคราบฝังลึก ผ้าขนสัตว์ สัญญาณที่เกี่ยวข้องจะสว่างบนแผงควบคุม
8. ในขั้นตอนนี้ คุณจะสามารถควบคุมอุณหภูมิการซัก ปริมาณการล้างน้ำ ความเร็วในการปั่น ตั้งเวลาซัก โดยกดปุ่มตัวเลือกที่ต้องการ
9. กดปุ่ม **เริ่ม/พัก** และเครื่องจะเริ่มต้นการซัก สัญลักษณ์ของขั้นตอนการซักจะสว่างขึ้น และเวลาที่เหลือของรอบการซักจะปรากฏในจอแสดงผล

ตัวเลือกการหยุด

ภายใน 5 นาทีนับจากเริ่มต้นการซัก คุณยังสามารถเพิ่มหรือนำผ้าออกได้

1. กดปุ่ม **เริ่ม/พัก** เพื่อปลดล็อคประตู

คุณจะไม่สามารถเปิดประตูได้อีก เมื่อน้ำร้อนเกินไป หรือระดับน้ำสูงเกินไป

2. หลังจากปิดประตู ให้กดปุ่ม **เริ่ม/พัก** เพื่อเริ่มต้นการซักอีกครั้ง

เมื่อสิ้นสุดรอบการซัก:

เมื่อสิ้นสุดรอบการซักทั้งหมด เครื่องจะปิดเองโดยอัตโนมัติ

1. เปิดประตู
2. นำผ้าออกจากเครื่อง

WD806U4SA-03223C-03_TH.indd 30 2015/5/27 9:25:54

การซักด้วยตนเอง

คุณสามารถซักผ้าด้วยตนเองโดยไม่ใช้ปุ่มเลือกโปรแกรมซักได้

1. เปิดท่อจ่ายน้ำ
2. กดปุ่ม **เปิด/ปิด**
3. เปิดประตู
4. ใส่ผ้าครั้งละชิ้น โดยอย่าให้ผ้าพันกัน และอย่าใส่ผ้ามากเกินไป
5. ปิดประตู
6. ใส่ผงซักฟอก และถ้าจำเป็น ใส่น้ำยาปรับผ้านุ่ม น้ำยาแช่ผ้าก่อนซักในช่องที่เหมาะสม
7. กดปุ่ม **อุณหภูมิ** เพื่อเลือกอุณหภูมิ
   (: น้ำเย็น , 20 °C, 30 °C, 40 °C , 60 °C และ 95 °C)
8. กดปุ่ม **ล้างน้ำ** เพื่อเลือกจำนวนรอบการล้าง
   จำนวนรอบการล้างสูงสุดคือห้ารอบ
   ระยะเวลาการซักจะเพิ่มขึ้นตามที่กำหนด
9. กดปุ่ม **ปั่นหมาด** เพื่อเลือกความเร็วในการปั่น
   (: ไม่มีการปั่น : **หยุดการล้างน้ำ**)
10. กดปุ่ม **ตั้งเวลาล่วงหน้า** ซ้ำๆ เพื่อเลือกตัวเลือกเวลาสิ้นสุดที่ใช้ได้ (ตั้งแต่ 3 ชั่วโมงถึง 19 ชั่วโมง โดยเพิ่มได้ครั้งละหนึ่งชั่วโมง) จำนวนชั่วโมงที่แสดงนั้นเป็นเวลาที่รอบการซักจะสิ้นสุดลง
11. กดปุ่ม **เริ่ม/พัก** และเครื่องจะเริ่มต้นการซัก

คำแนะนำของผ้า

ทำตามคำแนะนำง่ายๆ เพื่อให้ได้ผ้าสะอาด และการซักที่มีประสิทธิภาพ

ตรวจสอบฉลากการดูแลผ้าเสมอก่อนที่จะซัก

แยกผ้าตามประเภทของเนื้อผ้า ดังนี้:

- ฉลากดูแลผ้า: แยกผ้าเป็น ผ้าฝ้าย ผ้าเนื้อผสม ผ้าใยสังเคราะห์ ผ้าไหม ผ้าขนสัตว์ และเรยอน
- สี: แยกผ้าเป็นผ้าสีและผ้าขาว โปรดซักผ้าใหม่ที่เป็นผ้าสีแยกต่างหาก
- ขนาด: การใส่ผ้าขนาดต่างๆ กันในการซักจะทำให้การซักมีประสิทธิภาพดีขึ้น
- ความบอบบาง: ซักผ้าบางแยกต่างหาก ใช้โปรแกรมถนอมผ้าสำหรับผ้าขนสัตว์ใหม่ ผ้าม่าน และผ้าไหม ตรวจสอบป้ายของผ้าที่ซัก หรือดูผังการดูแลผ้าในภาคผนวก

นำสิ่งของออกจากกระเป๋า

ก่อนการซักแต่ละครั้ง ให้นำสิ่งของออกจากประเป๋าของผ้าก่อน ของแข็งขนาดเล็กที่มีรูปร่างต่างๆ เล่น เหรียญ มีด เข็มหมุด และคลิปหนีบกระดาษอาจทำให้เครื่องซักผ้าเสียหาย ห้ามซักผ้าที่มีหัวเข็มขัด กระดุม หรือโลหะหนักติดอยู่

โลหะบนเสื้อผ้าอาจทำให้เกิดความเสียหายกับผ้าและถังซักได้ กลับผ้าที่มีกระดุมและเสื้อผ้าที่มีลายปักก่อนที่จะซัก ถ้าไม่รูดซิปกางเกงปิดไว้ขณะซัก

ถังปั่นอาจเสียหายได้ โปรดรูปซิปปิดไว้ก่อนที่จะซักผ้า

เสื้อผ้าที่มีเชือกยาวอาจพันกับผ้าชิ้นอื่น และอาจทำให้ผ้าเสียหาย โปรดมัดเชือกไว้ก่อนที่จะซัก โปรดมัดเชือกไว้ก่อนที่จะซักผ้า

การแช่ผ้าฝ้าย

เครื่องซักผ้าของคุณ เมื่อใช้ร่วมกับผงซักฟอกชนิดใหม่ๆ จะสามารถให้ผลการซักที่ดีเยี่ยม พร้อมทั้งประหยัดพลังงาน เวลา น้ำและผงซักฟอก แต่หากผ้าฝ้ายสกปรกมาก คุณสามารถใช้การแช่ผ้ากับผงซักฟอกชนิดโปรตีน

WD806U4SA-03223C-03_TH.indd 31 2015/5/27 9:25:54

การซักผ้า

การพิจารณาปริมาณผ้าที่จะซัก

โปรดอย่าใส่ผ้ามากเกินไปในเครื่อง เนื่องจากจะทำให้ผ้าไม่สะอาด โปรดใช้ผังด้านล่างนี้เพื่อพิจารณาปริมาณผ้าที่จะซัก สำหรับประเภทของเนื้อผ้าที่ซัก

ประเภทของผ้า	ปริมาณผ้า
รุ่น	WD806
ผ้าฝ้าย **- เปื้อนปานกลาง/น้อย** **- เปื้อนมาก**	8.0 กก.
ผ้าใยสังเคราะห์	3.0 กก.
ซักคราบฝังลึก	2.0 กก.
ผ้าขนสัตว์	2.0 กก.

- เมื่อผ้าไม่สมดุล (“**UE**” สว่างในอแสดงผล) ให้กระจายชิ้นผ้าให้เสมอกัน
  ถ้าผ้าไม่สมดุล ประสิทธิภาพในการปั่นหมาดจะลดลง
- เมื่อซักชุดเครื่องนอนหรือผ้านวม เวลาในการซักอาจนานขึ้น และประสิทธิภาพในการปั่นหมาดจะลดลง

โปรดใส่ชุดชั้นในสตรี (ซักน้ำได้) ลงในถุงใส่ผ้าสำหรับซัก (ต้องซื้อเพิ่ม)

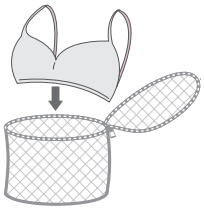

- ส่วนที่เป็นเหล็กของชุดชั้นในสตรีอาจทำให้วัสดุแตกหักและทำความเสียหายแก่เสื้อผ้าได้ ดังนั้นโปรดใส่ชุดชั้นในลงในถุงใส่ผ้าสำหรับซัก
- เสื้อผ้าชิ้นเล็กและมีน้ำหนักเบา เช่น ถุงเท้า ถุงมือ ถุงน่อง และผ้าเช็ดหน้า อาจติดอยู่บริเวณประตู โปรดใส่เสื้อผ้าเหล่านี้ไว้ในถุงใส่ผ้าสำหรับซัก

ข้อควรระวัง อย่าซักถุงใส่ผ้าเพียงอย่างเดียวโดยไม่มีผ้าอื่น เนื่องจากอาจทำให้เกิดการสั่นสะเทือนที่ทำให้เครื่องซักผ้าเคลื่อนที่ และอาจทำให้เกิดอุบัติเหตุ

ข้อมูลผงซักฟอกและสารเพิ่มเติมต่าง ๆ

ควรใช้ผงซักฟอกแบบใด

ประเภทของผงซักฟอกที่จะใช้นั้นขึ้นอยู่กับเนื้อผ้า (ผ้าฝ้าย ผ้าสังเคราะห์ ผ้าบาง ขนสัตว์) สี อุณหภูมิที่ซัก ระดับความสกปรก โปรดใช้ผงซักฟอกชนิด “ฟองน้อย” ซึ่งได้รับการออกแบบสำหรับเครื่องซักผ้าอัตโนมัติ
ปฏิบัติตามคำแนะนำของผู้ผลิตผงซักฟอก ตามน้ำหนักของผ้า ความสกปรก และความกระด้างของน้ำ หากคุณไม่ทราบว่าน้ำที่ใช้กระด้างมากเพียงใด โปรดติดต่อผู้ให้บริการน้ำประปาในพื้นที่

ห้ามใช้ผงซักฟอกที่เกาะตัวหรือแข็ง เนื่องจากผงซักฟอกอาจค้างอยู่ในรอบการซัก และทำให้เครื่องซักผ้าไม่สามารถล้างน้ำให้สะอาด และทำให้ช่องระบายน้ำล้นอุดตัน

โปรดระลึกถึงสิ่งต่อไปนี้เมื่อใช้โปรแกรมผ้าขนสัตว

- ใช้ผงซักฟอกที่มีฤทธิ์เป็นกลาง
- เมื่อใช้ผงซักฟอกชนิดผง อาจมีส่วนที่ตกค้างอยู่บนผ้าและทำให้เนื้อผ้า (ขนสัตว์) เสียหาย

WD806U4SA-03223C-03_TH.indd 32 2015/5/27 9:25:55

ช่องใส่ผงซักฟอก

เครื่องซักผ้าของคุณมีช่องแยกสำหรับจ่ายผงซักฟอกและน้ำยาปรับผ้านุ่ม เติมสารเพิ่มเติมในช่องที่ถูกต้องก่อนที่จะเริ่มต้นเครื่องซักผ้า

อย่าเปิดช่องใส่สารซักฟอก ขณะที่เครื่องซักผ้าทำงาน เนื่องจากอาจสัมผัสกับน้ำร้อนหรือไอน้ำ

1. ดึงช่องใส่ผงซักฟอกทางซ้ายของแผงควบคุมออก
2. เติมผงซักฟอกตามปริมาณที่แนะนำ ในช่องใส่ผงซักฟอก Ⅱ ก่อนที่จะเริ่มต้นใช้เครื่องซักผ้า

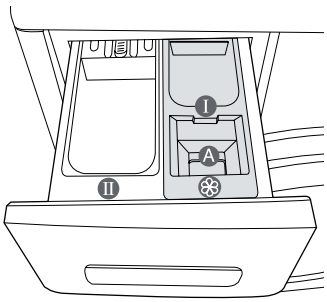

ถ้าต้องการใช้น้ำยาซักผ้าเหลว ให้ใช้ช่องใส่สารซักฟอกเหลว (โปรดดู "สารซักฟอกชนิดน้ำ" สำหรับรุ่นที่ต้องการ)

- อย่าใส่ผงซักฟอกชนิดผงในช่องใส่สารซักฟอกชนิดน้ำ

3. เติมน้ำยาปรับผ้านุ่มตามปริมาณที่แนะนำในช่องสำหรับใส่น้ำยาปรับผ้านุ่ม ㊋ ถ้าต้องการ อย่า เติมเกินเส้น MAX FILL (Ⓐ)

ข้อควรระวัง

อย่าเติม **สารซักฟอก** ทั้งแบบผง/น้ำในช่องใส่น้ำยาปรับผ้านุ่ม (㊋)

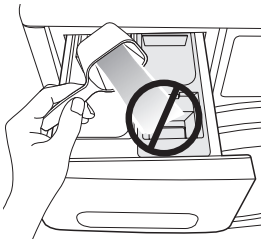

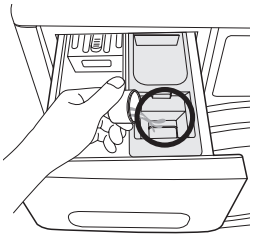

4. เมื่อใช้ตัวเลือกการแช่ผ้า ให้เพิ่มผงซักฟอกในปริมาณที่แนะนำในช่องสำหรับแช่ผ้า Ⅰ

เมื่อซักผ้าชิ้นใหญ่ โปรดอย่าใช้ผงซักฟอกประเภทต่อไปนี้

- ผงซักฟอกชนิดเม็ดและแคปซูล
- ผงซักฟอกที่ใช้บอลและตาข่าย

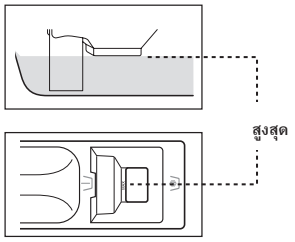

น้ำยาปรับผ้านุ่มชนิดเข้มข้นจะต้องมีการเจือจางด้วยน้ำสะอาด ก่อนที่จะเทลงในช่องใส่ (เพื่อไม่ให้ช่องทางไหลอุดตัน)

โปรดระวังอย่าให้น้ำยาปรับผ้านุ่มล้น เมื่อปิดช่องใส่ผงซักฟอก หลังจากเติมน้ำยาปรับผ้านุ่มในช่องใส่น้ำยาสำหรับการล้างน้ำ

สารซักฟอกชนิดน้ำ (เฉพาะบางรุ่น)

ในการใช้สารซักฟอกชนิดน้ำ ให้ใส่ที่แบ่งสารซักฟอกชนิดน้ำในส่วนของการซักหลักของช่องใส่สารซักฟอก และใส่สารซักฟอกชนิดน้ำในช่องสำหรับ
สารซักฟอกชนิดน้ำโดยเฉพาะ

- อย่า เติมเกินเส้น MAX
- เมื่อใช้สารซักฟอกแบบผง ให้ถอดที่แบ่งสารซักฟอกชนิดน้ำออกจากช่องใส่ผงซักฟอก สารซักฟอกชนิดผงจะไม่สามารถเข้าสู่ถังซักได้เมื่อมีช่องใส่สารซักฟอกชนิดน้ำ
- หลังจากการซัก สารซักฟอกชนิดน้ำอาจยังหลงเหลืออยู่ในช่องใส่สารซักฟอก

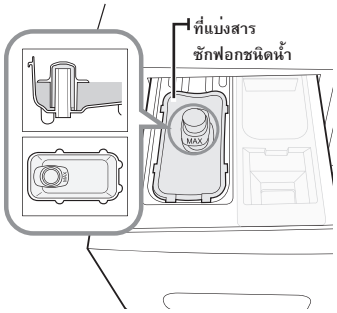

WD806U4SA-03223C-03_TH.indd 33 2015/5/27 9:25:55

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การรักษาความสะอาดของเครื่องซักผ้าจะช่วยเพิ่มประสิทธิภาพของเครื่อง หลีกเลี่ยงการซ่อมบำรุงที่ไม่จำเป็น และยืดอายุการใช้งาน

ล้างถังซัก

โปรแกรมนี้เป็นโปรแกรมทำความสะอาดตนเอง ซึ่งจะขจัดเชื้อราที่อาจเกิดขึ้นภายในเครื่องซักผ้า

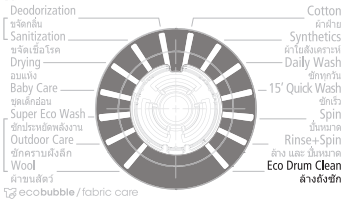

1. กดปุ่ม **เปิด/ปิด**
2. หมุนปุ่มเลือก **โปรแกรมซัก** ไปที่ตำแหน่ง ล้างถังซัก
   - คุณสามารถใช้ฟังก์ชั่นตั้งเวลาล่วงหน้า
   - อุณหภูมิของน้ำระหว่างการล้างถังซักจะถูกตั้งค่าไว้ที่ 70°C
   - ระบบจะตั้งค่าอัตโนมัติที่โปรแกรมผ้าฝ้ายระดับน้ำปานกลาง 30 °C เมื่อบรรจุผ้าลงมา

3. ใส่สารทำความสะอาดในปริมาณที่เหมาะสมในช่องใส่สารซักฟอก Ⅱ และปิดช่องใส่สารซักฟอก (เมื่อทำความสะอาดถังด้วยสารทำความสะอาด)
   - โปรดใช้สารทำความสะอาดที่แนะนำสำหรับการทำความสะอาดถัง
   - สารทำความสะอาดถังซักมีทั้งชนิดผงและชนิดน้ำ สารทำความสะอาดชนิดน้ำนั้นมีเฉพาะที่ใช้ช่องแบ่งสารซักฟอกชนิดน้ำ (ตัวเลือก)

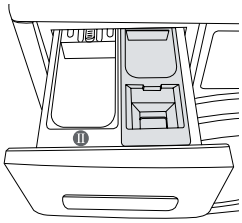

4. กดปุ่ม **เริ่ม/พัก**
   - ถ้าคุณกดปุ่ม **เริ่ม/พัก** โปรแกรมล้างถังซักจะเริ่มต้น

- เมื่อใช้โปรแกรมล้างถังซัก คุณสามารถทำความสะอาดถังซักโดยไม่ต้องใช้สารทำความสะอาด
- ห้ามใช้โปรแกรม ล้างถังซัก เมื่อมีผ้าอยู่ในเครื่อง อาจทำให้เนื้อผ้าเสียหาย หรือเกิดปัญหากับเครื่องซักผ้า

ข้อควรระวัง
- **ในโปรแกรมล้างถังซัก ห้ามใช้สารซักฟอกปกติเด็ดขาด**
- **ให้ใช้สารทำความสะอาดถังซักในปริมาณเพียง 1 ใน 10 ของปริมาณที่ผู้ผลิตสารทำความสะอาดแนะนำ**
- เนื่องจากการใช้สารฟอกสีที่เป็นคลอรีนจะทำให้ผลิตภัณฑ์เปลี่ยนสี โปรดใช้สารฟอกสีแบบออกซิเจนเท่านั้น
- สารทำความสะอาดแบบผง: ใช้สารฟอกสีแบบผงหรือสารทำความสะอาดสำหรับการล้างถังซักเท่านั้น
- สารทำความสะอาดแบบน้ำ: ใช้สารฟอกสีแบบน้ำหรือสารทำความสะอาดสำหรับการล้างถังซักเท่านั้น

WD806U4SA-03223C-03_TH.indd 34 2015/5/27 9:26:00

ฟังก์ชั่นเตือนอัตโนมัติของการล้างถังซัก

- ถ้าสัญญาณ "ล้างถังซัก" บนจอแสดงผลและไฟที่ปุ่มเลือกโปรแกรมสว่างหลังจากการซัก แสดงว่าถังซักต้องได้รับการทำความสะอาด ในกรณีนี้ ให้นำผ้าออกจากเครื่องซักผ้า เปิดเครื่อง และทำความสะอาดถังด้วยการเลือกโปรแกรมล้างถังซัก
- ถ้าคุณไม่ใช้โปรแกรม ล้างถังซัก สัญญาณ "ล้างถังซัก" บนจอแสดงผลและไฟบนปุ่มเลือกโปรแกรมจะดับ แต่สัญญาณ "ล้างถังซัก" บนจอและไฟสัญญาณบนปุ่มเลือกโปรแกรมจะสว่างอีกครั้งหลังจากที่ซักผ้าอีกสองครั้ง อย่างไรก็ตาม กรณีนี้จะไม่ทำให้เกิดปัญหากับเครื่องซักผ้า
- โดยทั่วไป สัญญาณเตือนล้างถังซักจะปรากฏประมาณเดือนละครั้ง ความถี่นี้อาจแตกต่างกันไป โดยขึ้นอยู่กับจำนวนครั้งที่ใช้เครื่องซักผ้า
- **ในกรณีที่มีสัญญาณเตือน ให้ทำความสะอาดตัวกรองเศษด้ายด้วย (โปรดดูที่ "การทำความสะอาดตัวกรองเศษด้าย" ที่หน้า 36) มิฉะนั้นประสิทธิภาพของฟังก์ชั่นซักฟองอาจลดลง**

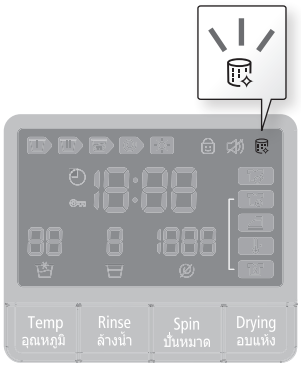

การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน

1. ถอดปลั๊กของเครื่องซักผ้า
2. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ

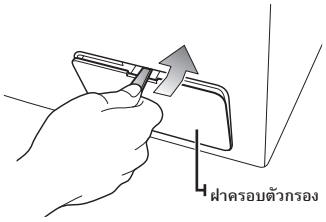

3. เปิดฝาท่อน้ำทิ้งฉุกเฉินด้วยการดึง

4. ยึดฝาที่ปลายของท่อน้ำทิ้งฉุกเฉิน และค่อยๆ ดึงออกมาประมาณ 15 ซม.
5. ปล่อยให้น้ำไหลลงในอ่าง

น้ำที่หลงเหลืออาจมากกว่าที่คุณคิด โปรดเตรียมอ่างขนาดใหญ่

6. ใส่ฝาปิดท่อระบายกลับเข้าที่
7. ปิดฝาครอบของตัวกรอง

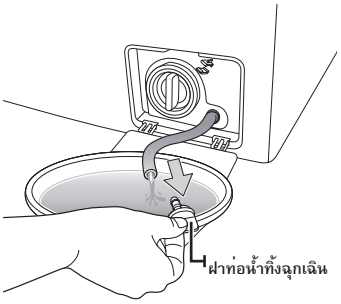

WD806U4SA-03223C-03_TH.indd 35 2015/5/27 9:26:02

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การทำความสะอาดตัวกรองเศษด้าย

ขอแนะนำให้ทำความสะอาดตัวกรองเศษด้าย 5 หรือ 6 ครั้งต่อปี หรือเมื่อข้อความ "**5E**" ปรากฏ (โปรดดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหัวข้อก่อนหน้า)
ถ้ามีสิ่งแปลกปลอมสะสมในตัวกรองเศษด้าย ประสิทธิภาพของฟังก์ชั่นซักฟองจะลดลง

ข้อควรระวัง ก่อนที่จะทำความสะอาดตัวกรองเศษด้าย ให้ถอดปลั๊กไฟออกก่อน

1. ขจัดน้ำที่เหลือค้างอยู่ก่อน (ดูที่ "การทิ้งน้ำเมื่อเกิดเหตุฉุกเฉิน" ในหน้า 35)

   ถ้าคุณถอดตัวกรองโดยไม่ได้ระบายน้ำออกก่อน น้ำที่เหลืออาจหกล้นออกมา

2. เปิดฝาตัวกรองโดยใช้เหรียญหรือกุญแจ
3. ไขสกรูของท่อน้ำทิ้งฉุกเฉิน โดยหมุนไปทางซ้าย เพื่อทิ้งน้ำให้หมด
4. ไขตัวกรองเศษด้ายออก

5. ล้างเศษฝุ่นละอองหรือวัสดุอื่นออกจากตัวกรองเศษด้าย ตรวจสอบว่าใบพัดของปั๊มน้ำทิ้งที่ด้านหลังของตัวกรองไม่อุดตัน
6. ปิดฝาของตัวกรองเศษด้าย
7. ปิดฝาครอบของตัวกรอง

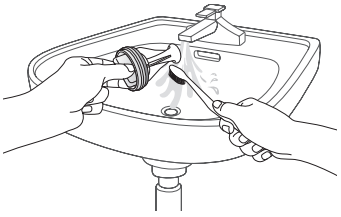

ข้อควรระวัง อย่าเปิดฝาครอบตัวกรองเศษด้ายขณะที่เครื่องทำงานหรือร้อนจัดอาจมีน้ำไหลออกมา

- โปรดใส่ฝาครอบตัวกรองหลังจากทำความสะอาดตัวกรอง ถ้าตัวกรองหลุดออกจากเครื่องเครื่องซักผ้าของคุณอาจทำงานผิดปกติหรือมีน้ำรั่ว
- ควรประกอบตัวกรองให้เสร็จหลังจากทำความสะอาดตัวกรองแล้ว

การทำความสะอาดภายนอก

1. เช็ดผิวด้านนอกของเครื่องซักผ้า รวมถึงแผงควบคุม ด้วยผ้านุ่มและผงซักฟอกที่ไม่มีสารขัดถู
2. ใช้ผ้านุ่มเช็ดให้แห้ง
3. ห้ามเทน้ำบนเครื่องซักผ้า

WD806U4SA-03223C-03_TH.indd 36 2015/5/27 9:26:02

การทำความสะอาดช่องใส่และที่พักผงซักฟอก

1. กดสลักคลายที่ด้านในของที่ใส่ผงซักฟอก และดึงออก
2. ถอดที่แบ่งน้ำยาปรับผ้านุ่มและกล่องใส่สารซักฟอกแบบน้ำ (ตัวเลือก) ออกจากลิ้นชักใส่สารซักฟอก

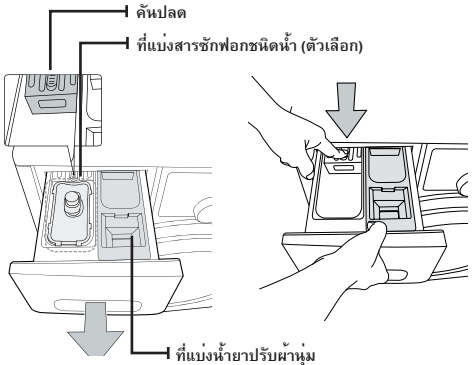

3. ล้างทุกส่วนด้วยน้ำสะอาดที่ไหล

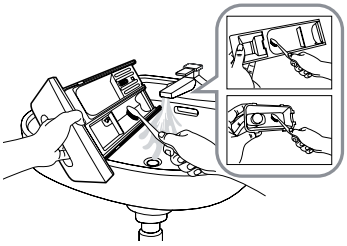

4. ล้างที่พักผงซักฟอกด้วยแปรงสีฟันเก่า
5. ใส่ที่แบ่งน้ำยาปรับผ้านุ่มและกล่องใส่สารซักฟอกชนิดน้ำ (ตัวเลือก) ด้วยการดันเข้าที่ให้แน่น
6. ดันช่องใส่เข้าที่
7. ถ้าต้องการขจัดผงซักฟอกที่หลงเหลือ ให้ใช้โปรแกรมล้างน้ำโดยไม่ต้องมีผ้าในถัง

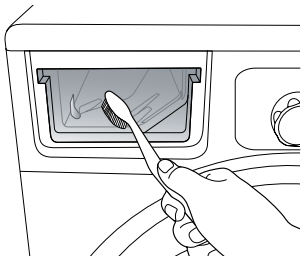

การทำความสะอาดตัวกรองท่อจ่ายน้ำ

คุณควรทำความสะอาดตัวกรองของท่อจ่ายน้ำอย่างน้อยปีละครั้ง หรือเมื่อมีข้อความ "**4E**" ปรากฏขึ้น:

1. ปิดน้ำที่จ่ายเข้าสู่เครื่องซักผ้า
2. ไขท่อออกจากด้านหลังของเครื่องซักผ้า เพื่อป้องกันไม่ให้น้ำไหลออกเนื่องจากแรงดันอากาศในท่อ ให้ใช้ผ้าปิดปลายท่อไว้
3. ใช้คีมจับตะแกรงตัวกรองออกจากปลายของท่อ และล้างด้วยน้ำสะอาด นอกจากนี้ ให้ทำความสะอาดด้านนอกและด้านในของข้อต่อที่เป็นเกลียวด้วย
4. ดันตัวกรองเข้าที่
5. ไขท่อเข้ากับเครื่องซักผ้าดังเดิม
6. ตรวจสอบว่าไม่มีน้ำรั่วและเปิดก๊อก

WD806U4SA-03223C-03_TH.indd 37 2015/5/27 9:26:03

การทำความสะอาดและดูแลรักษาเครื่องซักผ้า

การซ่อมแซมเครื่องซักผ้าหากน้ำแข็งตัว

หากอุณหภูมิต่ำกว่าจุดเยือกแข็ง และน้ำในเครื่องซักผ้ากลายเป็นน้ำแข็ง ให้ทำดังนี้

1. ถอดปลั๊กของเครื่องซักผ้า
2. เทน้ำอุ่นที่ก๊อกจ่ายน้ำ เพื่อให้ท่อจ่ายน้ำหลวม
3. ถอดท่อจ่ายน้ำ และแช่ในน้ำอุ่น
4. เทน้ำอุ่นในถังซักของเครื่องซักผ้า และทิ้งไว้ประมาณ 10 นาที
5. ต่อท่อจ่ายน้ำเข้าที่ และตรวจสอบว่าการจ่ายน้ำและการทิ้งน้ำเป็นปกติ

การจัดเก็บเครื่องซักผ้า

ถ้าคุณจำเป็นต้องจัดเก็บเครื่องซักผ้าเป็นเวลานาน คุณควรระบายน้ำออกและถอดปลั๊กและท่อน้ำ เครื่องซักผ้าอาจได้รับความเสียหายถ้ามีน้ำค้างอยู่ในท่อและองค์ประกอบภายใน ในระหว่างที่จัดเก็บ

1. เลือกโปรแกรม **ผ้าฝ้าย** และเติมสารฟอกในช่องสารฟอก จากนั้นกดปุ่ม **ซักเร็ว** และให้เครื่องซักผ้าทำงานโดยไม่ต้องใส่ผ้า
2. ปิดก๊อกน้ำและถอดท่อจ่ายน้ำ
3. ถอดปลั๊กเครื่องซักผ้าจากเต้าเสียบไฟฟ้า และเปิดประตูเครื่องทิ้งไว้เพื่อให้อากาศหมุนเวียน

ถ้าเครื่องซักผ้าของคุณมีการจัดเก็บในอุณหภูมิต่ำกว่าจุดเยือกแข็ง โปรดรอให้น้ำที่ตกค้างในเครื่องละลายก่อนที่จะใช้งานอีกครั้ง

WD806U4SA-03223C-03_TH.indd 38 2015/5/27 9:26:03

การแก้ไขปัญหาและรหัสข้อมูล

ตรวจสอบสิ่งต่อไปนี้ถ้าเครื่องซักผ้าของคุณ...

ปัญหา	การแก้ไข
ไม่ทำงาน	• ตรวจสอบว่าเครื่องซักผ้าเสียบปลั๊กเรียบร้อย • ตรวจสอบว่าประตูปิดสนิท • ตรวจสอบว่าก๊อกจ่ายน้ำเปิดอยู่ • โปรดตรวจสอบว่าได้กดปุ่ม เริ่ม/พัก แล้ว
ไม่มีน้ำหรือน้ำไม่เพียงพอ	• เปิดก๊อกน้ำจนสุด • ตรวจสอบว่าท่อจ่ายน้ำไม่จับตัวเป็นน้ำแข็ง • ยืดให้ท่อจ่ายน้ำตรง • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ
มีผงซักฟอกหลงเหลือในช่องใส่หลังจากการซัก	• ตรวจสอบว่าเครื่องซักผ้าต่อกับแหล่งจ่ายน้ำที่มีแรงดันเพียงพอ • ตรวจสอบว่าได้เติมผงซักฟอกในช่องกลางของที่ใส่
สั่นสะเทือนหรือมีเสียงดัง	• ตรวจสอบว่าเครื่องตั้งอยู่บนพื้นที่ซึ่งราบเสมอกัน หากพื้นที่ไม่ราบเสมอกัน ให้ปรับขาตั้งของเครื่องให้ได้ระดับ • ตรวจสอบว่านำหมุดสำหรับการขนส่งออกแล้ว • ตรวจสอบว่าเครื่องซักผ้าไม่ได้สัมผัสกับวัตถุอื่น • ตรวจสอบว่าปริมาณผ้าอยู่ในถังอย่างสมดุล
เครื่องซักผ้าไม่ทิ้งน้ำ และ/หรือปั่นหมาด	• ทำให้ท่อน้ำทิ้งตรง จัดให้ท่อไม่บิดงอ • ตรวจสอบว่าตัวกรองเศษผ้าไม่อุดตัน
ประตูล็อคและไม่สามารถเปิดได้	• ฝาเครื่องจะไม่สามารถเปิดได้จนกว่าจะครบ 3 นาทีหลังจากที่เครื่องหยุดการทำงานหรือมีการปิดเครื่อง

ถ้าปัญหาเหล่านี้ยังคงอยู่ โปรดติดต่อศูนย์บริการลูกค้าของ Samsung ใกล้บ้าน

WD806U4SA-03223C-03_TH.indd 39 2015/5/27 9:26:03

การแก้ไขปัญหาและรหัสข้อมูล

รหัสข้อมูล

เมื่อเครื่องซักผ้าทำงานผิดปกติ คุณอาจพบรหัสข้อมูลในจอแสดงผล ในกรณีนี้ ให้ตรวจสอบตารางต่อไปนี้และลองใช้วิธีแก้ไขที่แนะนำก่อนที่จะติดต่อฝ่ายบริการลูกค้า

สัญลักษณ์ของรหัส	การแก้ไข
dE	• ตรวจสอบว่าประตูปิดสนิท • ตรวจสอบว่าผ้าไม่ติดกับประตู
4E	• ตรวจสอบว่าเปิดก๊อกจ่ายน้ำแล้ว • ตรวจสอบแรงดันน้ำ • ทำความสะอาดตัวกรองที่ท่อจ่ายน้ำ เมื่อเครื่องซักผ้าแสดงรหัส “4E” เครื่องซักผ้าจะระบายน้ำทิ้งเป็นเวลา 3 นาที ในช่วงเวลานี้ ปุ่มเปิดปิดจะใช้งานไม่ได้
5E	• ทำความสะอาดตัวกรองเศษผ้า • ตรวจสอบว่าท่อระบายน้ำได้รับการติดตั้งอย่างเหมาะสม • ทำความสะอาดตัวกรองท่อจ่ายน้ำ
UE	• ผ้าไม่สมดุล ให้คลายผ้าที่พันกันออก หากมีการซักผ้าเพียงชิ้นเดียว เช่น เสื้อคลุมอาบน้ำหรือกางเกงยีนส์ การปั่นครั้งสุดท้ายอาจไม่ได้ผลดีเท่าที่ควร และข้อความแสดงข้อผิดพลาด “UE” จะปรากฏในจอแสดงผล
cE/3E	• ติดต่อฝ่ายบริการหลังการขาย
HOT	• จะปรากฏเมื่ออุณหภูมิภายในถังซักสูง พัดลมจะทำงานโดยอัตโนมัติ ดังนั้นโปรดรอให้สัญญาณ “Hot” หายไป
Sud/Sd	• แสดงขึ้นเมื่อการตรวจพบฟองจำนวนมากเกินไป อีกทั้งยังแสดงในขณะที่ฟองถูกกำจัดออกไปแล้วด้วยเช่นกัน เมื่อกำจัดฟองออกเรียบร้อยแล้ว เครื่องจะหมุนปกติ (นี้เป็นหนึ่งในขั้นตอนการทำงานตามปกติ ซึ่งเป็นการแสดงความผิดพลาดเพื่อป้องกันในกรณีที่เครื่องไม่สัมผัสถึงความผิดปกติ)
Uc	• กรณีที่กระแสไฟฟ้าไม่เสถียร เครื่องซักผ้าจะพักการทำงานเพื่อป้องกันอุปกรณ์ไฟฟ้า • กรณีที่กระแสไฟฟ้ากลับมาสู่ภาวะปกติ เครื่องจะเริ่มการหมุนอีกครั้งโดยอัตโนมัติ

สำหรับรหัสที่ไม่ปรากฏข้างต้น หรือถ้าคำแนะนำใช้ไม่ได้ผล โปรดติดต่อศูนย์บริการของ Samsung หรือตัวแทนจำหน่าย Samsung ใกล้บ้าน

WD806U4SA-03223C-03_TH.indd 40 2015/5/27 9:26:03

ผังโปรแกรม

ผังโปรแกรม

(● ตัวเลือกสำหรับผู้ใช้)

โปรแกรม	น้ำหนักสูงสุด (กก.)	ผงซักฟอก			อุณหภูมิสูงสุด (°C)	ความเร็วในการปั่น (สูงสุด) รอบต่อนาที
	WD806	แช่ผ้า	ซัก	น้ำยาปรับผ้านุ่ม		WD806U4
ผ้าฝ้าย	8.0	●	ใช่	●	95	1400
ผ้าใยสังเคราะห์	3.0	●	ใช่	●	60	1200
ซักทุกวัน	4.0	●	ใช่	●	60	1400
ซักเร็ว	2.0	-	ใช่	●	40	800
ล้างถังซัก	-	-	-	-	70	400
ชุดเด็กอ่อน	4.0	●	ใช่	●	95	1400
ซักประหยัดพลังงาน	4.0	●	ใช่	●	40	1200
ซักคราบฝังลึก	2.0	-	ใช่	-	40	1200
ผ้าขนสัตว์	2.0	-	ใช่	-	40	800

โปรแกรม	ซักฟองแบบประหยัด	เพิ่มประสิทธิภาพ	ตั้งเวลาล่วงหน้า	อบแห้ง
ผ้าฝ้าย	●	●	●	●
ผ้าใยสังเคราะห์	●	●	●	●
ซักทุกวัน	●	●	●	●
ซักเร็ว	●	-	●	●
ล้างถังซัก	-	-	●	-
ชุดเด็กอ่อน	●	●	●	●
ซักประหยัดพลังงาน	●	●	●	●
ซักคราบฝังลึก	●	-	●	●
ผ้าขนสัตว์	●	-	●	-

1. โปรแกรมที่มีการแช่ผ้าจะใช้เวลานานขึ้นประมาณ 18 นาที
2. ข้อมูลระยะเวลาของโปรแกรมได้รับการวัดตามเงื่อนไขที่ระบุในมาตรฐาน IEC 60456 / EN 60456
   ผ้าฝ้าย 60°C + เพิ่มประสิทธิภาพ เป็นโปแกรมตาม EN60456
3. เวลาของโปรแกรมในแต่ละบ้านอาจต่างจากค่าที่ระบุในตาราง เนื่องจากแรงดันและอุณหภูมิของน้ำ ปริมาณผ้า และประเภทของผ้า
4. เมื่อมีการเลือกฟังก์ชัน Intensive Wash (เพิ่มประสิทธิภาพ) เวลาของรอบจะเพิ่มขึ้นสำหรับแต่ละรอบ

WD806U4SA-03223C-03_TH.indd 41 2015/5/27 9:26:03

ภาคผนวก

ผังการดูแลผ้า

สัญลักษณ์ต่อไปนี้เป็นคำแนะนำในการดูแลผ้า ฉลากการดูแลผ้าประกอบด้วยสัญลักษณ์สี่อย่างตามลำดับ: การซัก การฟอกขาว การอบแห้ง และการรีด (ตลอดจนการซักแห้ง ถ้าจำเป็น) การใช้สัญลักษณ์ช่วยให้มีความสม่ำเสมอระหว่างผู้ผลิตเสื้อผ้าแต่ละรายทั้งสำหรับผ้าในประเทศและผ้าที่นำเข้า โปรดปฏิบัติตามฉลากการ
ดูแลเพื่อยืดอายุการใช้งานของผ้าและลดปัญหาในการซัก

	ผ้าหนา		สามารถรีดที่ความร้อนสูงสุด 100 °C
	ผ้าบาง		ห้ามรีด
95 95	ซักได้ที่ความร้อน 95 °C	A	ซักแห้งด้วยสารทำละลายใดก็ได้
60 60	ซักได้ที่ความร้อน 60 °C	P	ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ก แอลกอฮอล์ หรือ R113 เท่านั้น
40 40	ซักได้ที่ความร้อน 40 °C	F	ซักแห้งด้วยน้ำมันก๊าด แอลกอฮอล์ หรือ R113 เท่านั้น
30 30	ซักได้ที่ความร้อน 30 °C		ห้ามซักแห้ง
	ซักด้วยมือ		ห้ามแขวน
	ซักแห้งเท่านั้น		แขวนได้
Cl	ใช้สารฟอกในน้ำเย็น		ตากด้วยไม้แขวนเสื้อ
	ห้ามใช้สารฟอก		ใช้เครื่องอบ ความร้อนปกติ
	สามารถรีดที่ความร้อนสูงสุด 200 °C		ใช้เครื่องอบ ความร้อนต่ำ
	สามารถรีดที่ความร้อนสูงสุด 150 °C		ห้ามใช้เครื่องอบ

การปกป้องสิ่งแวดล้อม

- อุปกรณ์นี้ได้รับการผลิตจากวัสดุรีไซเคิล หากคุณต้องการทิ้งอุปกรณ์นี้ โปรดปฏิบัติตามระเบียบการทิ้งขยะของพื้นที่ ตัดสายไฟ เพื่อป้องกันไม่ให้มีการต่อสายไฟกับเครื่องใช้ไฟฟ้านี้อีก ถอดประตูออก เพื่อป้องกันไม่ให้สัตว์หรือเด็กติดอยู่ภายใน
- อย่าใช้ผงซักฟอกเกินปริมาณที่แนะนำโดยผู้ผลิตผงซักฟอก
- ใช้สารขจัดคราบและสารฟอกขาวก่อนการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าโดยซักเต็มถัง (ปริมาณผ้าขึ้นอยู่กับโปรแกรมที่ใช้)

WD806U4SA-03223C-03_TH.indd 42 2015/5/27 9:26:05

ข้อมูลจำเพาะ

ประเภท				
ขนาด			WD806U4SA**	
			ก 600 มม. X ล 640 มม. X ส 850 มม.	
แรงดันน้ำ			50 kPa ~ 800 kPa	
ปริมาณน้ำ			100 ล	
น้ำหนักสุทธิ			WD806U4SA**	
			70 กก.	
ความจุในการซักและการปั่นหมาด			8.0 กก. [ผ้าแห้ง]	
ความจุในการอบแห้ง			5.0 กก.	
การใช้พลังงานไฟฟ้า	รุ่น		WD806U4SA**	
	ขณะซัก		220 โวลต์	100 วัตต์
	ซักและอบร้อน		220 โวลต์	2000 วัตต์
	อบแห้ง		220 โวลต์	1600 วัตต์
	ปั่นหมาด	รุ่น	WD806U4SA**	
		220 โวลต์	400 วัตต์	
	ปั๊ม		34 วัตต์	
การหมุนปั่นหมาด	รุ่น		WD806U4SA**	
	รอบต่อนาที		1400	

ลักษณะและข้อมูลจำเพาะของผลิตภัณฑ์อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า

WD806U4SA-03223C-03_TH.indd 43 2015/5/27 9:26:05

ถ้าคุณมีคำถามหรือข้อคิดเห็น

ประเทศ	โทรศัพท์	หรือเยี่ยมชมเว็บไซต์ของเราที่
THAILAND	0-2689-3232 1800-29-3232	www.samsung.com/th/support

รหัส DC68-03223C-03_TH